

# **Quick Installation Guide**

## **Printer Overview**

### Loading the Media

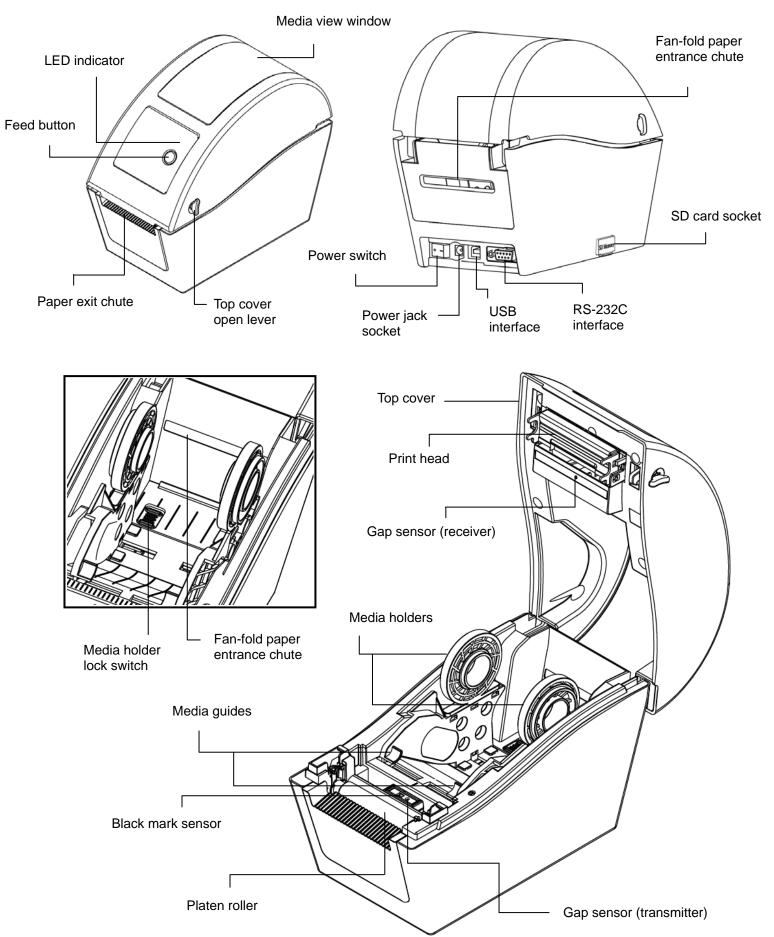

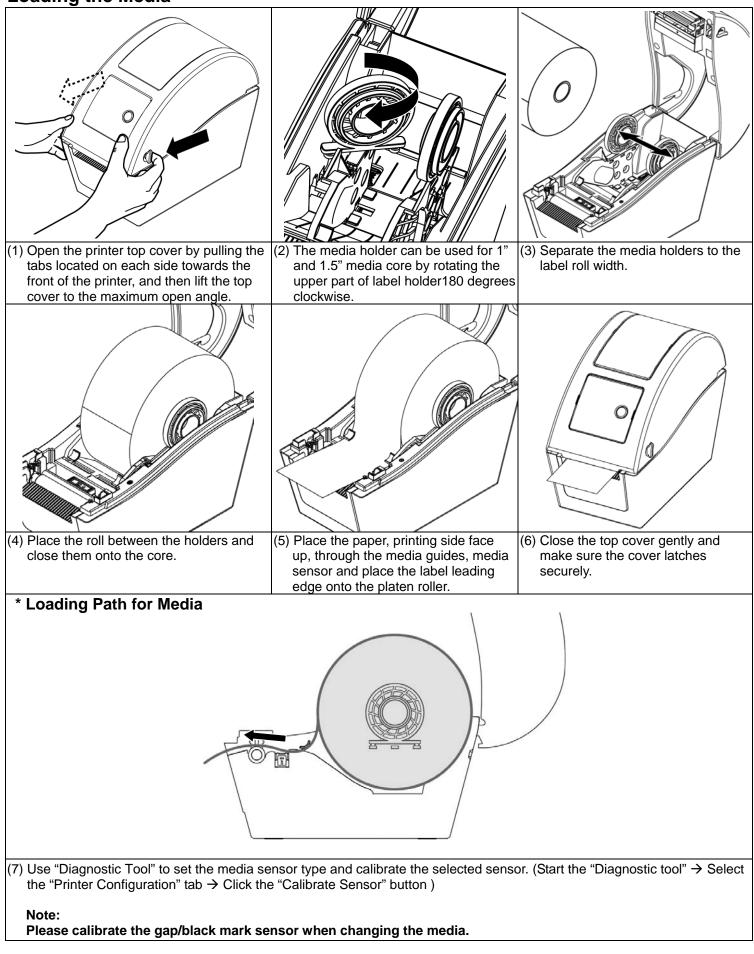

## **Button Functions**

#### (1) Feed labels

When the printer is ready, press the button to feed one label to the beginning of next label.

#### (2) Pause the printing job

When the printer is printing, press the button to pause a print job. When the printer is paused the LED will blink green. Press the button again to continue the printing job.

## **Diagnostic Tool**

The Diagnostic Utility is a toolbox that allows users to explore the printer's settings and status; change printer settings; download graphics, fonts, and firmware; create printer bitmap fonts; and to send additional commands to the printer. Using this convenient tool, you can explore the printer status and settings and troubleshoot the printer. **Note: This utility works with printer firmware V6.00 and later versions.** 

Start the Diagnostic Tool: DiagTool.exe t i i i (1) Double click on the Diagnostic tool icon to start the software. (2) There are four features (Printer Configuration, File Manager, Bitmap Font Manager, Command Tool) included in the Diagnostic utility. About Features tab Language Printer Configuration | File Manager | Bitmap Font Manager | Command Tool Interface Calibrate Sensor ( inch Ethernet Setup Cmm Check Su RTC Setup Print Test Page • Printer functions Ribbon Reset Printer lensitu Code Page + -Factory Default Country Code Dump Text • Ignore AUTO.BAS tedia Senso Reprint After Er Configuration Page Printer setup Gap(unit) Gap Inten. ap Offset(unit) Bline Inten. Post-Print Actic Continuous -Cut Piece Baud Bate leference Data Bits • -Direction Parity **Printer Status** Offset Stop Bit(s) Shift X Shift Y Save Get Status Clear Load Set Bead 2009/8/20 下午 03:31:40 COM1 9600.N.8.1 RTS

(3) The detail functions in the Printer Function Group are listed as below.

Printer Function	Function	Description
Calibrate Sensor	Calibrate Sensor	Calibrate the sensor specified in the Printer
Ethernet Setup		Setup group media sensor field
	Ethornot Sotup	Setup the IP address, subnet mask, gateway for
RTC Setup	Ethernet Setup	the on board Ethernet
Print Test Page	RTC Time	Synchronize printer Real Time Clock with PC
	Print Test Page	Print a test page
Reset Printer		
Factory Default	Reset Printer	Reboot printer
		Initialize the printer and restore the settings to
Dump Text	Factory Default	factory default.
Ignore AUTO.BAS Configuration Page	Dump Text	To activate the printer dump mode.
	Ignore AUTO.BAS	Ignore the downloaded AUTO.BAS program
	Configuration Page	Print printer configuration

#### Note:

- \* For more information and features about this printer, please refer to the User's Manual inside the CD disk.
- \* Please switch OFF printer power switch prior to plug in the power cord to printer power jack.
- \* Specifications, accessories, parts and programs are subject to change without notice.

e refer to the User's Manual inside the CD disk. power cord to printer power jack. t to change without notice.