



User Guide



Contents

Contents	2
Chapter 1 Software introduction	4
1.1 Brief introduction	4
1.2 Software structure	4
1.3 Application	5
1.3.1 Application on individual computer	5
1.3.2 Application in the LAN/WAN/Internet	5
1.4 The functions and advantages	6
Chapter 2 Software installation & uninstall	7
2.1 Software running environment	7
2.1.1 System requirement	7
2.1.2 Operating system supported	7
2.2 Software installation	7
2.2.1 Windows	7
2.2.2 Linux	9
2.2.3 Mac	9
2.2.4 Other OS	9
2.3 Start software	9
2.3.1 Windows	9
2.3.2 Mac OS	10
2.3.3 Other OS	10
2.4 Software uninstallation	10
2.4.1 Windows	10
2.4.2 Mac OS	12
2.4.3 Other OS	12
Chapter 3 Main functions introduction	13
3.1 Software management	13
3.1.1 Be software administrator and modify password	13
3.1.2 The communication port setting	13
3.2 Searching Device automatically	15
3.3 The monitoring with local agent	15
3.3.1 Communication mode	15
3.3.1.1 COM port communication	15
3.3.1.2 USB communication	15
3.3.2 Device status view	15
3.3.3 Device control parameters setting	16
3.3.4 UPS shutdown control	16
3.3.5 Battery control parameter setting	20
3.3.6 Battery self-test	21
3.3.7 UPS log	22
3.3.7.1 Record setting	22
3.3.7.2 Data log	23
3.3.7.3 Event log	24
3.3.8 Load Segment Control setting	24
3.3.9 UPS model setting	25



3.3.10 Battery test to low took less than setting minute	25
3.4 Warning event notification method	26
3.4.1 Real time warning dialog	26
3.4.2 E-mail notification	27
3.4.3 SMS notification	28
3.5 System shutdown protection	29
3.5.1 Local computer shutdown protection	30
3.5.2 Remote computer shutdown protection	32
3.5.3 Remote Linux/Unix/NAS computer shutdown protection	35
3.5.4 ESXi host and VMs shutdown protection	36
3.5.5 Set the Shutdown parameters via localShutdownConfig.json	38
3.6 Remote monitoring device	40
3.6.1 Install software on different computer to monitor remote device	40
3.6.2 Webserver Function	44
3.7 SNMP centralized monitoring	45
3.7.1 Becoming SNMP administrator	45
3.7.2 Area management	46
3.7.3 UPS management	46
3.7.4 SNMP event log	51
3.7.5 SNMP Trap Receiving Port Setting	51
3.8 Wake on LAN function	52
3.9 Preference	53
3.9.1 Temperature unit	53
3.9.2 Date format	53
3.9.3 Bottom Image	53
3.9.4 Advance Settings	53
3.10 Language	53
3.11 Start Wizard	53
3.12 Help	54
3.12.1 Online help	54
3.12.2 Version	54
3.13 Modbus TCP monitoring	54
Chapter 4 Frequent questions	57
4.1 How to do if software port is in use by other software	57
4.2 Configure the computer powered by Multi-UPS shut down safely	58
4.3 The communication between UPS and software on Debian Etch Stable Core 2.6 18-5-486	62
4.4 The communication between UPS and software on RedHat Core 2.6 9 ..	63
4.5 Mac 10.5 with terminal interface opened can be shut down normally ...	63
4.6 How to use software on Windows server 2008 core	64
4.7 How to use software on VMware ESX 3.5/4.0/4.1	66
4.8 How to use software on VMware ESXi OS	71
Chapter 5 Software Secure Usage statement	72
Appendix A - The detail information about glossary	73
Appendix B - Event List	74



Chapter 1 Software introduction

1.1 Brief introduction

Software is a UPS monitoring software, that can support to monitor the status of local UPS and remote UPS in the LAN or WAN. User can monitor and configure the UPS on any computer in the LAN or WAN.

The software monitors the real-time status of UPS at all times, when status of UPS is abnormal, software will give warning information to user, protect the key equipment and shut down the system of the computer when needed.

The software can protect computer systems from being shut down abnormally when power fails. With the software, a UPS can provide security protection for more than one computer at the same time, including shutting down system in security, saving application data and shut down the output of the UPS when power fails.

1.2 Software structure

There are three components of the software: Agent, Monitor and Tray Icon.

Please refer to the following figure 1.2.1 to comprehend the relationship of the three components.

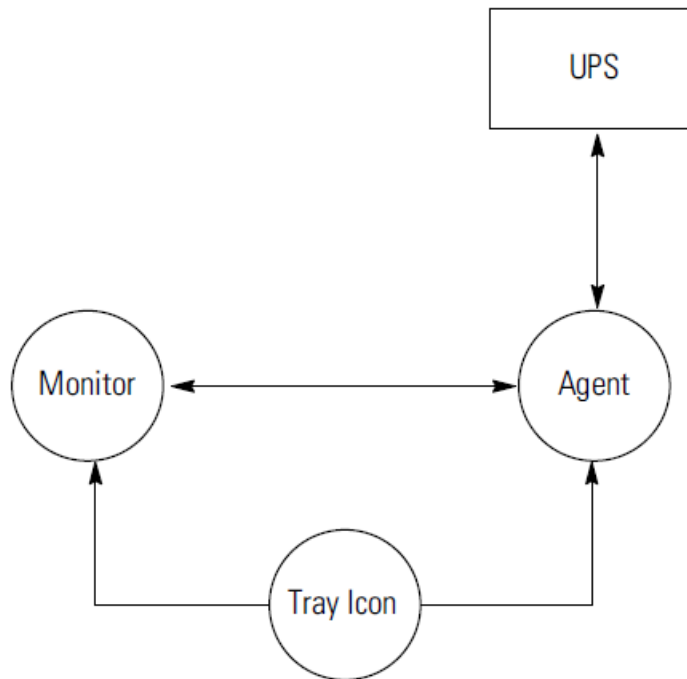


Figure 1.2.1

Agent is the key component of the software, running as a system service on background. Agent communicates with UPS, logs the event of UPS, notifies user when the UPS is abnormal, takes some actions according to the user configuration and shuts down the system of computer when necessary. User can configure Agent by Monitor.

Monitor is the user interface of the software. User can get real-time status of UPS, configure the parameters of UPS and set shutdown parameters by monitor.

Tray Icon, shown on the taskbar of Windows system, is the management tool of the software. Start software from "start" menu of system or login in system when restart system after installing software, if the software runs normally, a green icon will be shown on the taskbar of Windows system.

▲ The Tray Icon exists on Windows only.



There are two different statuses of Tray Icon to display the current status of Agent. Refer to the following figure 1.2.3.

 10:49 AM	Agent stop
 10:48 AM	Agent is running

Figure 1.2.2

1.3 Application

1.3.1 Application on individual computer

Refer to figure 1.3.1

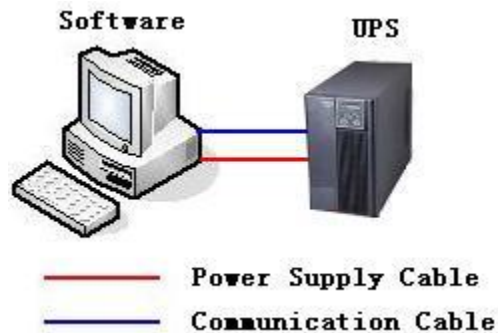


Figure 1.3.1

1.3.2 Application in the LAN/WAN/Internet

Refer to figure 1.3.2

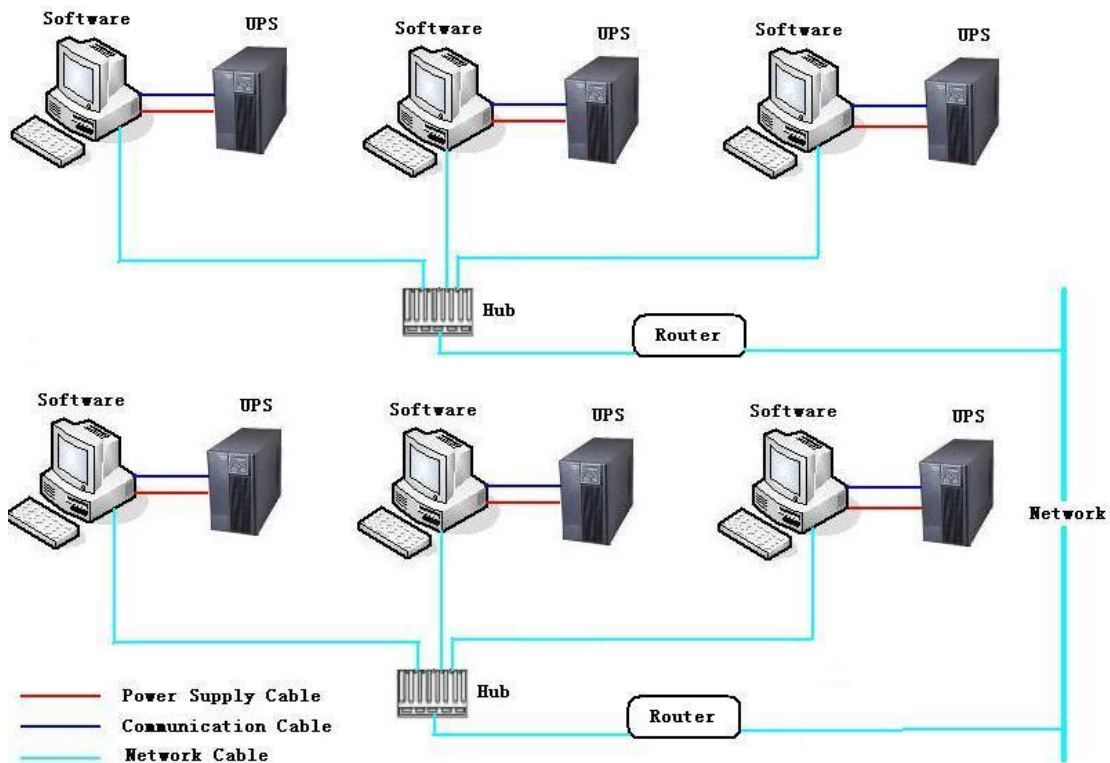




Figure 1.3.2

1.4 The functions and advantages

1. Once the software starts, it will never stop running to protect the key equipment in 24 hours every day.
2. You can have a detailed view about the parameters and status of UPS, such as utility power, UPS type, the load, and battery information.
3. Software can automatically search and monitor the UPSs in LAN when start the software at the first time.
4. Software can monitor the UPSs in the internet.
5. With security protect function. The software administrator password can be set to prevent others from sabotaging. Only the software administrator has the right of full access, other users only have the right of view.
6. With the function of data auto protection, it can close most of the running applications and save the related files.
7. With the function of turning on and off the UPS on scheduled time, software also can shut down computer safely before turning off the output of UPS.
8. With the function of battery self-test on scheduled time, it can check the health of UPS system
9. With the function of shutting down computer in LAN or WAN, it can shut down computer safely before turning off the output of UPS.
10. Software can log data and event. It is very convenient for user to learn detail information about UPS.
11. There are two kinds of notification method to let user learn the status of UPS as soon as possible.
 - 11.1 SMS
 - 11.2 E-mail
12. The SNMP centralized monitoring function of software can monitor the status of UPS with SNMP card located in different regions.



Chapter 2 Software installation & uninstall

2.1 Software running environment

2.1.1 System requirement

1. 256MB hard disk space at least.
2. TCP/IP protocol must be installed to support network management.
3. For local connection, an available communication port (RS-232 Serial Port or USB port) is needed to connect UPS with a communication cable.

Note: the OS should support JDK 1.8 at least, or the software won't work normally.

2.1.2 Operating system supported

Windows server 2000
Windows server 2003
Windows server 2008
Windows 2008 server core
Hyper-V server 2008
Windows XP
Windows vista
Windows 7
Windows 8
Windows 10
Windows SBS 2011
Windows server 2012,2016,2019
Hyper-V server 2012,2016,2019
Linux
Unix
Mac OS X
VMware ESX 3.5, 4.0, 4.1 (paid version)
VMware ESXi 4.0, 4.1, 5.0, 5.1, 5.5, 6.0, 6.5, 6.7,7.0(paid version)
XenServer 5.5, 6.2, 6.5,7.2

2.2 Software installation

▲ **Software installation must be run with administrator of system.**

▲ **When installing software on Windows 2008/Windows Vista/Windows 7/Windows 8/Windows 10/Windows 2012, user should right click the “setup” icon, and select the menu “Run as administrator”, there will be a dialog “user account control” pop-up, user should select “allow” button to continue installation.**

2.2.1 Windows

On Windows, Enter \Windows, double click setup.exe to start the installation, there will be installation interface shown. Please refer to figure 2.2.1.1.

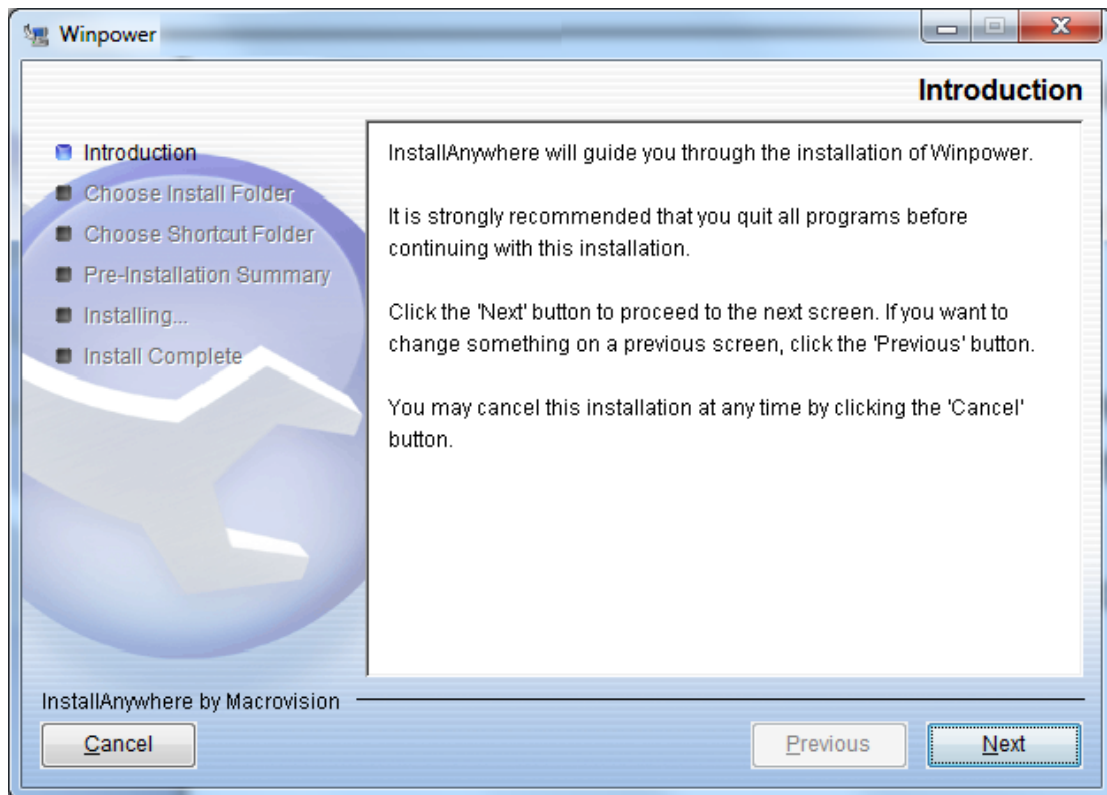


Figure 2.2.1.1

When the installation program is completed, click "Done". Refer to the following figure 2.2.1.2

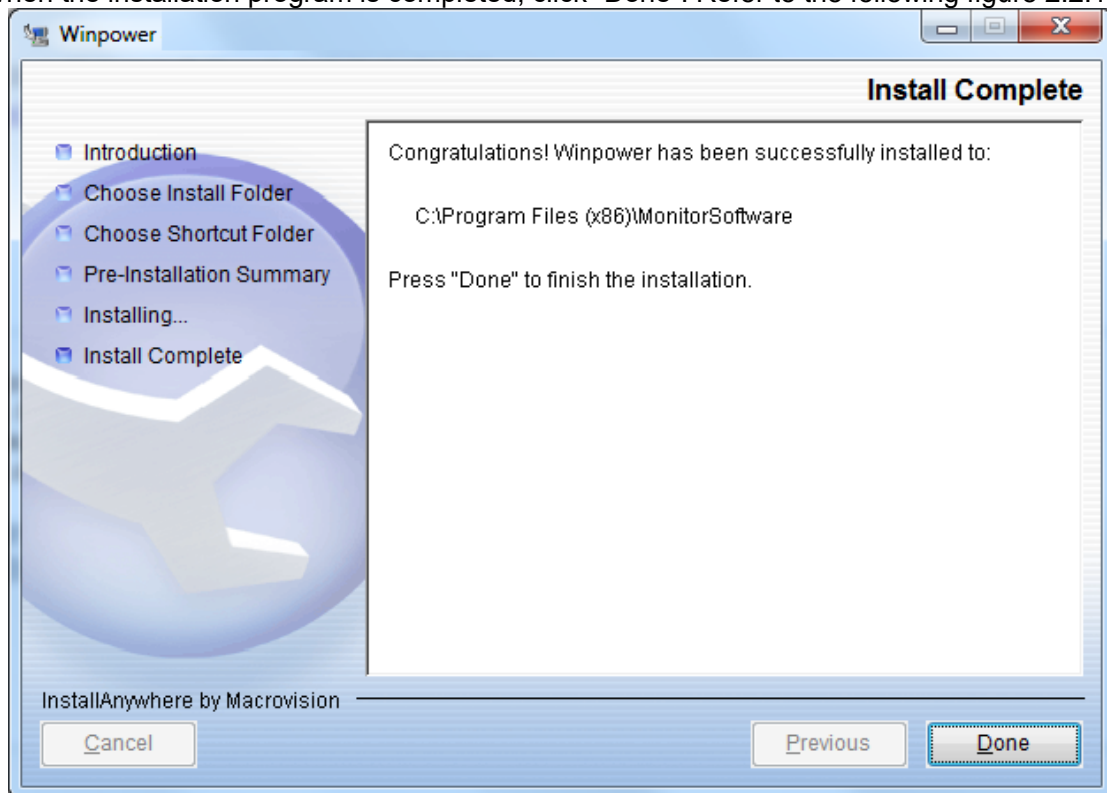


Figure 2.2.1.2



2.2.2 Linux

On Linux, copy Linux and InstallerData file, or copy LinuxAMD64 and InstallerData file, enter Linux or LinuxAMD64 file to start installation, the installation interfaces are same as section 2.2.1.

The command `./setup.bin` is for GUI mode, the command `./setup_console.bin` is for CUI mode.

Please note: Linux is for i386/i586/i686 Linux system, LinuxAMD64 is for x86_x64 Linux system.

2.2.3 Mac

On Mac OS, for Mac 10.6 or earlier OS, please enter \MacOSX file, double click the setup.zip to start the installation. For Mac 10.7 and later OS, please enter \MacOSX10.7andLater file, double click .mpkg file to start the installation.

2.2.4 Other OS

Copy other OS installation file and InstallerData file, enter OS file, and execute `./setup.bin` for GUI mode or `setup_console.bin` for console mode.

For example, on Unix OS, copy GenericUnix file and InstallerData file, Enter GenericUnix file, execute `./setup.bin` for GUI mode or `setup_console.bin` for CUI mode to start the installation.

2.3 Start software

2.3.1 Windows

Run software from Start\All Program\Winpower will start the Tray and Agent. Please refer to figure 2.3.1.1.

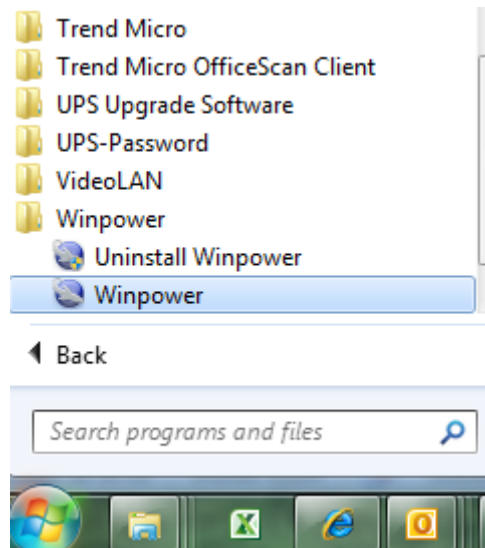


Figure 2.3.1.1

There will be a green icon shown on the task bar after software starts. That means the agent is running normally. Please refer to figure 2.3.1.2.

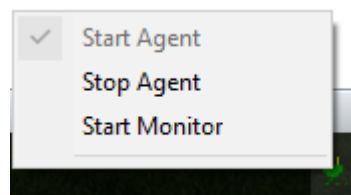


Figure 2.3.1.2



“Start Agent” is to start agent; “Stop Agent” is to stop agent; “Start Monitor” is to start management interface; “Exit” is to exit agent service.

▲ For the version after 5.8.0.0(including 5.8.0.0), you just need to restart the Winpower from “Start” menu after Winpower agent exit.

▲ For the version prior to 5.8.0.0, On Windows 2008, Windows Vista, Windows 7, Windows 8, Windows 10 and Windows 2012, once you click “Exit”, the agent will exit, if you wants to start software again, you should restart computer, or act as an administrator to start the service “UPSmonitor” in the task manager and then start software from “start” menu, the green icon will be shown on the task bar.

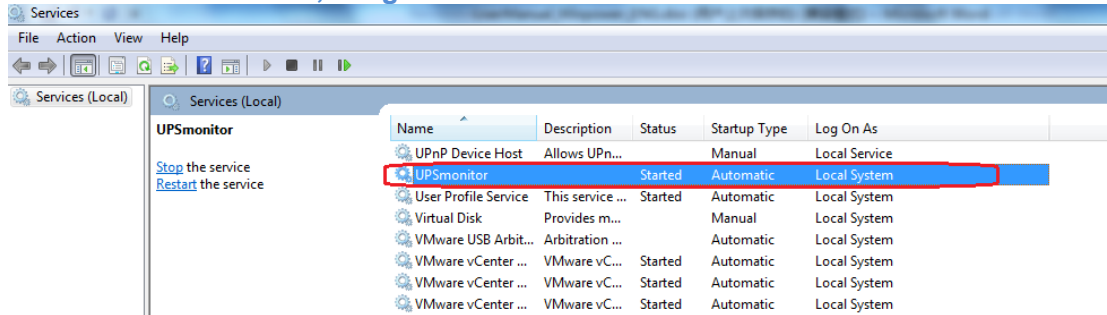


Figure 2.3.1.3

2.3.2 Mac OS

The default installation path is /opt/MonitorSoftware, enter the installation path and then input the command: **sudo ./agent start** to start agent, input the command: **sudo ./monitor** to start software management interface.

2.3.3 Other OS

The default installation path is /opt/MonitorSoftware, enter the installation path and then input the command: **./agent start** to start agent, input the command: **./monitor** to start software management interface.

2.4 Software uninstallation

▲ Software management interface should be closed and the agent should be exited, or else software can't be uninstalled totally.

2.4.1 Windows

Close software management interface, exit software agent from “Exit” menu referring to in figure 2.3.1.2, and then uninstall software from “start” menu, please refer to figure 2.4.1.1.

Please note: user also can uninstall software from “add or remove programs” component.

▲ On Windows 2008, Windows Vista, Windows 7, Windows 8 and Windows 2012, user should act as administrator when uninstalling software, select “Run as administrator” from the pop-up menu. If there is “user account control” dialog shown, please select “allow”.

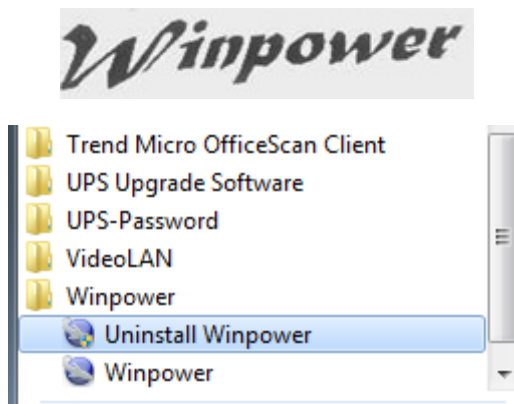


Figure 2.4.1.1

Uninstallation interface, please refer to figure 2.4.1.2.

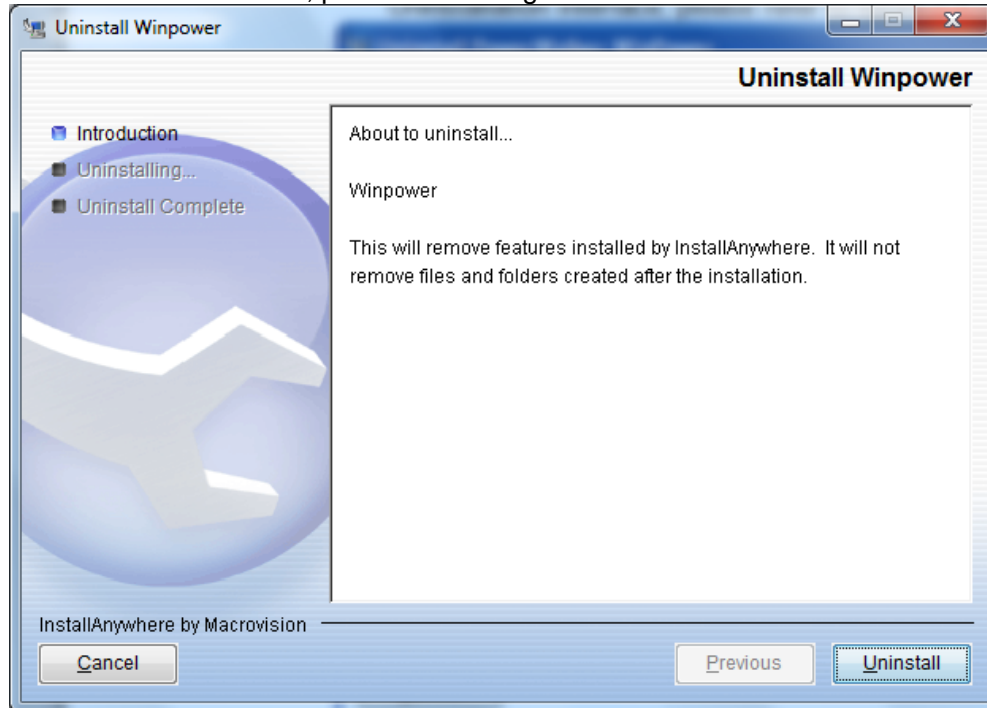


Figure 2.4.1.2

When uninstallation is finished, there will be an interface shown as figure 2.4.1.3. Please click "Done" to finish software uninstallation.

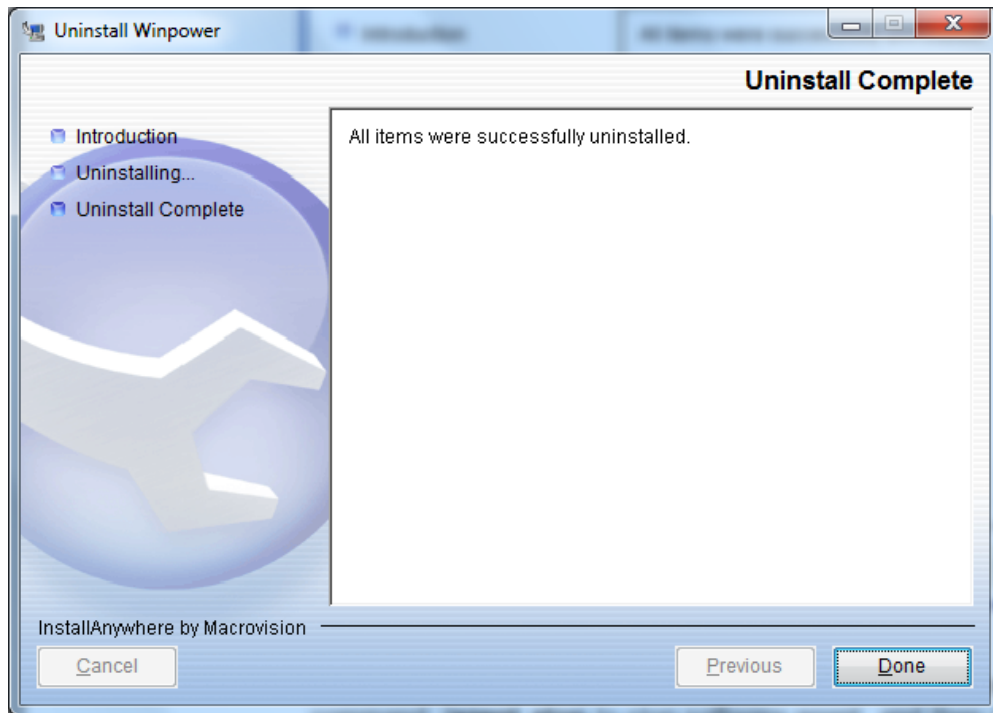


Figure 2.4.1.3

2.4.2 Mac OS

Close software management interface, enter software installation file, input command: **sudo ./agent stop** to stop software agent, and then input command: **sudo ./Uninstall** to uninstall software.

2.4.3 Other OS

Close software management interface, enter software installation file, input command: **./agent stop** to stop software agent, and then input command: **./Uninstall** to uninstall software.



Chapter 3 Main functions introduction

3.1 Software management

3.1.1 Be software administrator and modify password

▲ If the user wants to configure software setting, user should be administrator of the software first. The default right is read-only, can't configure settings.

Be software administrator: select the agent name (computer name) in the tree view of software interface, and click the "Act as Administrator" item of "System" menu, there will be a dialog shown, please refer to figure 3.1.1.1. Input password and click "OK" button. If the password is not correct, there will be message to inform user; if the password is correct, user can act as administrator of software, and can configure software settings.

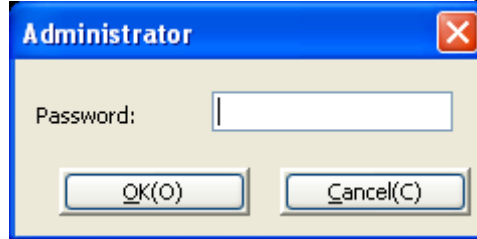


Figure 3.1.1.1

There is no default password, when user acts as administrator of software, user can change password, click "Modify Administrator Password" item of "System" menu, there will be a dialog shown, please refer to figure 3.1.1.2. Input new password and double check, and click "OK" button. User should input new password to act as administrator next time. User can modify the password by remote agent.




Figure 3.1.1.2

3.1.2 The communication port setting

Click "COM Port Setting" item of "System" menu to open the setting dialog.


For the Windows OS, all the Serial ports will show in the "Communication Port Setting" as below image. Please choose your serial ports connected to the UPS.

The software will search the first 4 ports as default if no serial ports are chosen.

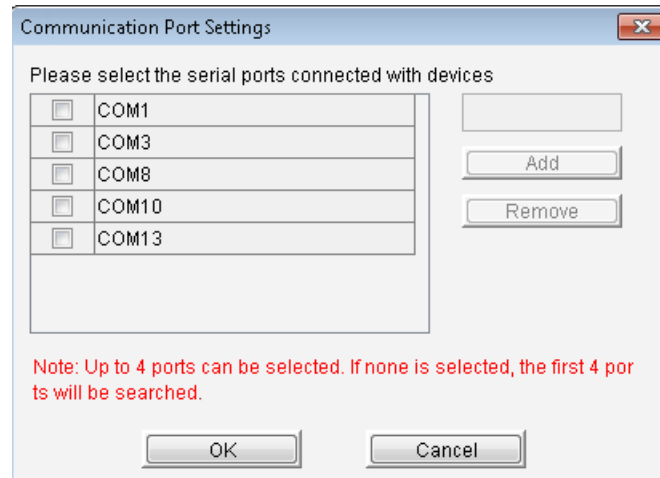

For example:
UPS connect to the COM13 and COM15, COM13 and COM15 aren't included in the first four serial ports.

Please choose COM13 and COM15 in the "Communication Port Setting" firstly, then click "Auto Search Device" to search the devices.

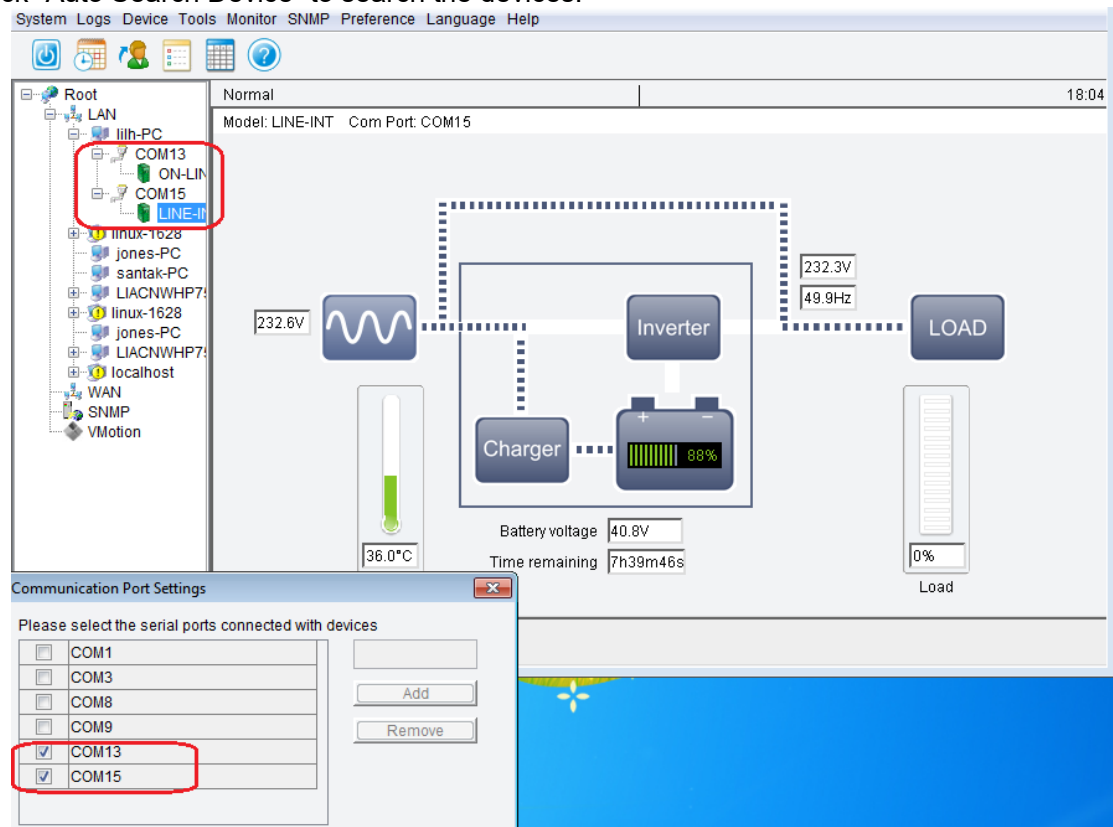

▲ For Linux and Unix OS, you should add the other serial ports manually.
please refer to 3.1.2.

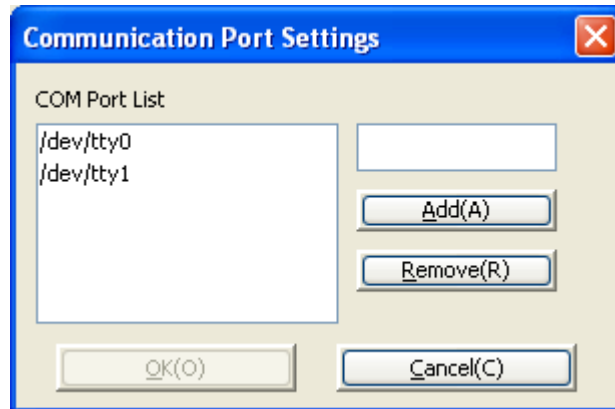


Figure 3.1.2

3.2 Searching Device automatically

User should click “Auto Search Device” item of “System” menu to search for new UPS, and set up communication between software and UPS. Software can search for all the UPS connecting to the communication ports.

Right-Click the agent, User can get the inventory from the device including Location, IP address, Model, device status, Link(only for SNMP device), serial number.

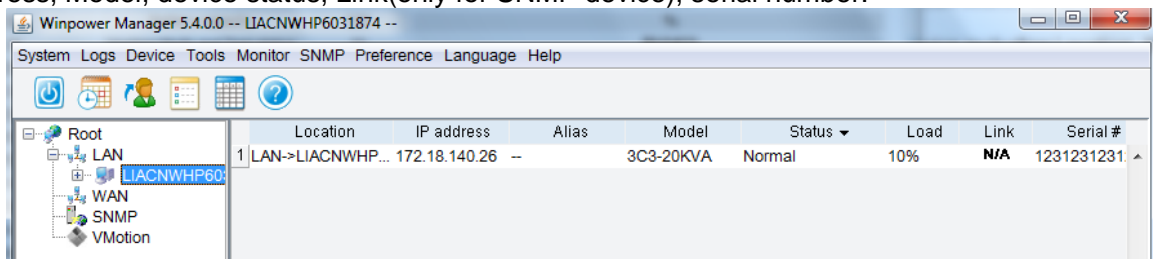


Figure 3.2

3.3 The monitoring with local agent

3.3.1 Communication mode

3.3.1.1 COM port communication

Software communicates with UPS via COM port.

The requirement: there should be RS232 hardware port or RS232 virtual port in computer, RS232 communication cable, UPS with RS232 port.

▲ **Software can communicate with 4 UPS via RS232 port at most at the same time.**

3.3.1.2 USB communication

Software communicates with UPS via USB port.

The requirement: there should be USB hardware port in computer, USB communication cable, UPS with USB port.

▲ **Software can communicate with 32 UPS via USB port at most at the same time.**

3.3.2 Device status view

Select UPS node, then the UPS flow chart and UPS parameters will be shown, please refer to figure 3.3.2

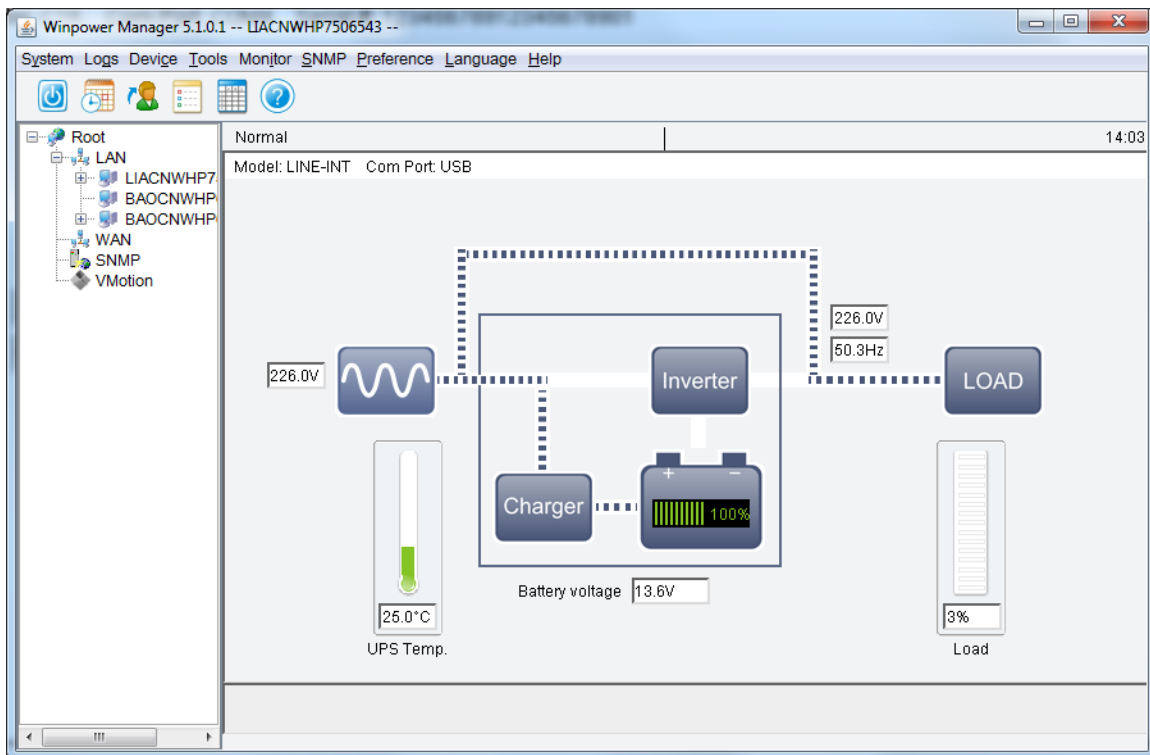


Figure 3.3.2

3.3.3 Device control parameters setting

Select UPS node, click “Device control parameters” item of “Device” menu to configure UPS control parameters. The content of “UPS control parameters” depends on UPS type. Different UPS type has different UPS control parameters. Most UPS support parameter setting, but some UPS can’t support parameter setting. When you select UPS node, and then find “UPS control parameters” item is grey, that means the UPS don’t support parameter setting.

▲ Please refer to UPS user manual to learn how to configure UPS control parameters

The control parameters dialog of some UPS, such as figure 3.3.3.

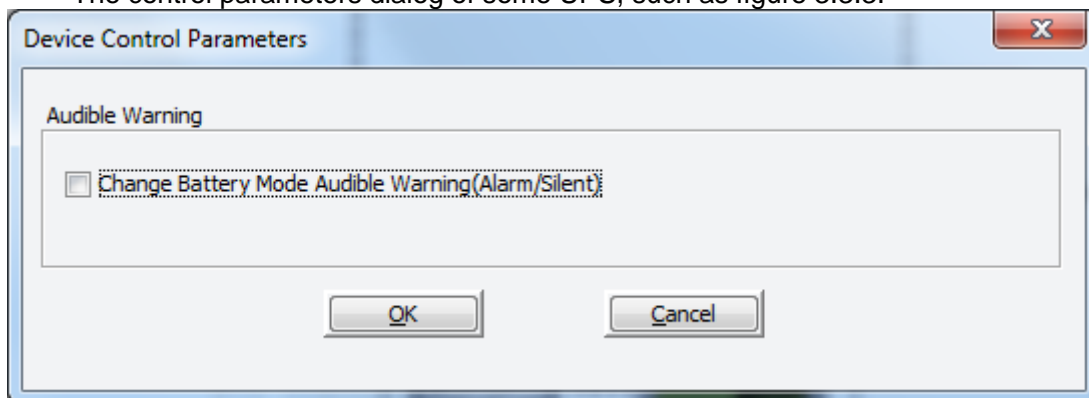


Figure 3.3.3

3.3.4 UPS shutdown control

When UPS is abnormal, software will shut down UPS output. There are five conditions, no matter which one condition met, software will send shutdown command to UPS.



Condition 1: When the battery backup time is exhausted after AC fail, software will send shutdown command to UPS.

Condition 2: When UPS battery low, software will send shutdown command to UPS.

Condition 3: When UPS battery capacity is at the setting value or lower, software will send shutdown command to UPS.

Condition 4: When UPS battery remaining time is below the setting value, software will send shutdown command to UPS.

Condition 5: Schedule shutdown UPS output on specific time or weekly.

Condition 1, 2, 3 and 4 should be set on "Shutdown Setting" dialog, please refer to 3.3.4.1. Open "Shutdown Setting" dialog by clicking "Shutdown Parameter" item of "Device" menu.



Shutdown Settings

Shutdown Options

USB LINE-INT_000000000

☒ Allow battery to discharge for 10 min

☒ Begin Shutdown Immediately when Battery is Low

☒ Begin Shutdown when UPS Battery is at 40 % Capacity or lower

☒ Shut down when remaining battery time is below 2 min

☒ System ☒ Shut down ☐ Hibernate ☐ Multi-UPS input

☒ Shut down UPS

Time needed for system shutdown 2 min

Powered by

☐ Accept Remote Shutdown signal from other Agent

0 min shutdown system

☐ Run Command File before Shutdown

Shutdown File Max Execution Time 1 min

Run Mode ☒ Service ☐ Non-Service

☐ Shutdown remote Linux/Unix/NAS by SSH before Shutdown

☐ Shutdown ESXi hosts and VMs before Shutdown

Shutdown Remote Agents

Shutdown Conditions Agent is shutdown

Shutdown Alarm Parameters

Shutdown Alarm Interval 1 min

Scheduled Shutdown Countdown warning 10 min

OK Cancel

Figure 3.3.4.1

When the battery back-up time is exhausted after AC fail, software will send shutdown command to UPS.

Select the checkbox of “Allow battery to discharge for” and set the backup time according to UPS load. The default value of battery backup time is 10 minutes.

When AC fails, software will inform user the input of UPS is abnormal and how long time UPS output will be shut down. When the backup time is exhausted, software will send shutdown command to UPS. When the system shutdown need time is exhausted,



UPS output will shut down. The default value of system shutdown need time is 2 minutes. So UPS battery should have the ability to supply power to key device for the time, the value of the time should be longer than the value of battery backup time added the value of system shutdown need time.

When UPS battery low, software will send shutdown command to UPS.

Select the checkbox of “Begin shutdown immediately when battery is low”, when AC fails, software will inform user the input of UPS is abnormal and send shutdown command to UPS.

When UPS battery capacity is at the setting value or lower, software will send shutdown command to UPS.

Select the checkbox of “Begin shutdown when UPS battery is at 40% capacity or lower”, when AC fails, software will inform user the input of UPS is abnormal, when UPS battery is 40% or lower, software will send shutdown command to UPS.

When UPS battery remaining time is below the setting value, software will send shutdown command to UPS.

Select the checkbox of “Shut down when remaining battery time is below 2 min”, when AC fails, software will inform user the input of UPS is abnormal, when UPS battery remaining time is below the setting value, software will send shutdown command to UPS.

Condition 5 should be set on “UPS on/off Manager” dialog, please refer to figure 3.3.4.2. “UPS on/off Manager” dialog can be opened by clicking “UPS on/off Schedule” item of “Device” menu.

September 2012

Sun	Mon	Tue	Wed	Thu	Fri	Sat
						1
2	3	4	5	6	7	8
9	10	11	12	13	14	15
16	17	18	19	20	21	22
23	24	25	26	27	28	29
30						

OK(O)
Cancel(C)

Symbol

- UPS Power Off
- UPS Power On
- UPS Test

Task List

Type	Date	Start Time	Operate	Delay Time	Operated UPS

Add UPS OnOff(U) Modify(M) Remove(R)

Figure 3.3.4.2

Schedule shutdown and restart UPS output on specific time or weekly

User can set schedule shutdown task on “UPS OnOff Manager” dialog: UPS shutdown on the specific time and UPS shutdown weekly. The time UPS shutdown can last for



time range from 1 to 9999 seconds. That means the time from UPS output shutdown to output restart can be set from 1 to 9999 seconds.

The shutdown task list and the calendar are shown on the dialog. On the calendar, the red point is schedule shutdown task; the green is schedule restart task; the blue point is schedule battery self-test task. User can add schedule shutdown task by “Add UPS OnOff” button, and modify or remove schedule shutdown task by “Modify” or “Remove” button.

▲ The time of new task can't be same as the task that has been added.

When schedule task has been added, software will pop up warning dialog to remind user that UPS will be shut down. The shutdown warning dialog will pop up at the time interval, the warning time interval and the time begin to count down can be set in the “Shutdown Setting” dialog. Please refer to figure 3.3.4.1.

The schedule shutdown task can be shown on “View Schedule” dialog. The dialog can be opened by “View Schedule” item of “Device” menu. Please refer to figure 3.3.4.3.

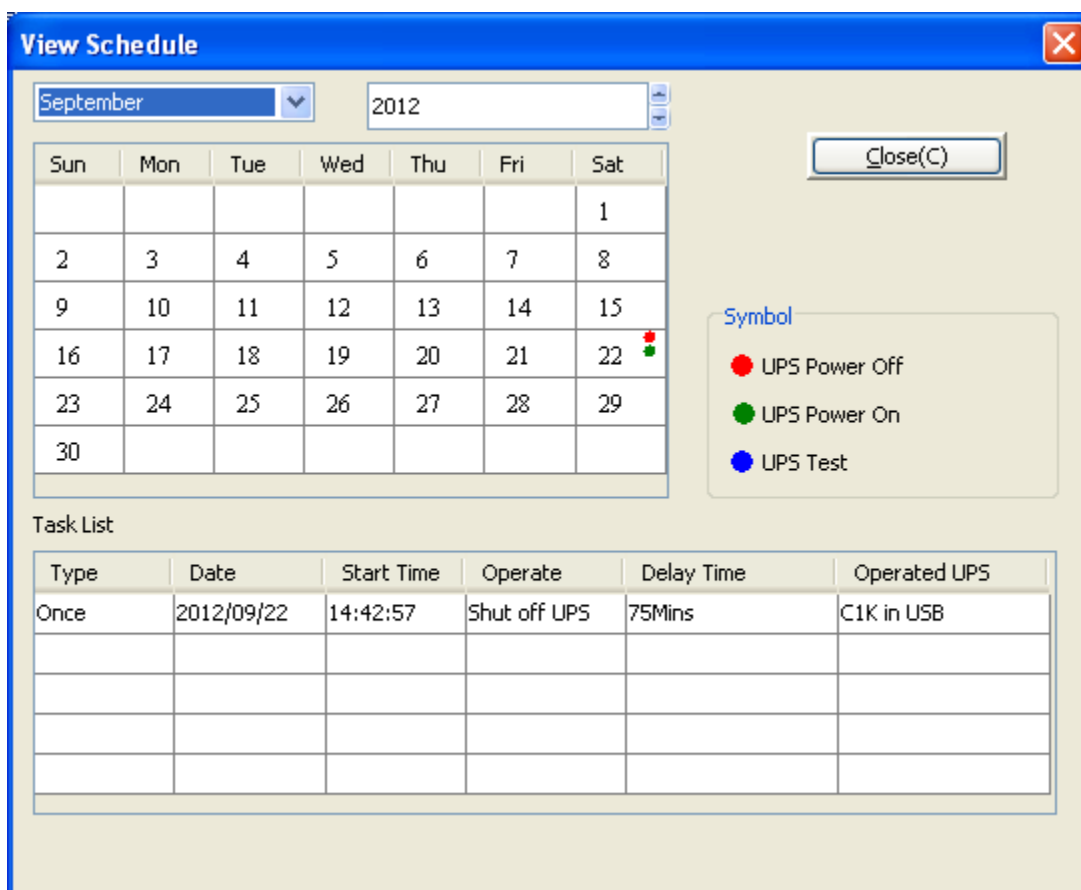


Figure 3.3.4.3

3.3.5 Battery control parameter setting

Select UPS node, click “UPS Battery Parameters” item of “Device” menu to configure battery control parameters. The content of “UPS battery parameters” depends on UPS type. Different UPS type has different battery control parameters. Most UPS support parameter setting, but some UPS can't support parameter setting. When you select UPS node, and then find “UPS Battery Parameters” item is grey, that means the UPS don't support parameter setting.

▲ Please refer to UPS user manual to learn how to configure battery control parameters



The battery control parameters dialog of some UPS, such as figure 3.3.5.

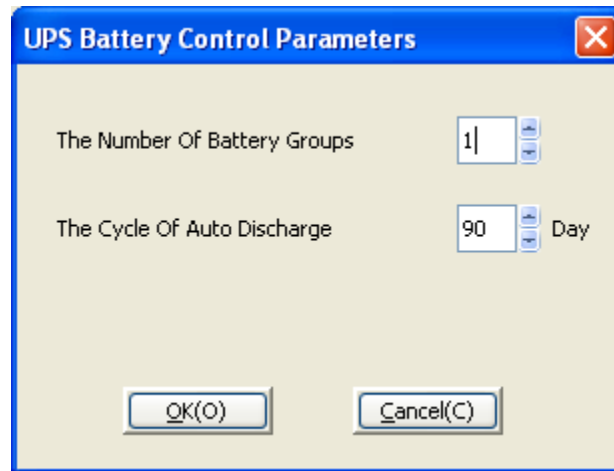


Figure 3.3.5

3.3.6 Battery self-test

UPS battery should be in good status to supply power to key device when AC fails.

So battery self-test function is very important to check battery status.

Battery self-test includes battery self-test immediately and schedule battery self-test.

Battery self-test type:

- Battery self-test for 10 seconds
- Battery self-test until battery low
- Battery self-test for N minutes, the range of N is from 1 to 99, default value of N is 10 minutes.

Battery self-test immediately

Open “Battery Self-Test Now” dialog by the “Battery Self-Test Now” item of “Device” menu, select self-test type and battery test will begin. Please refer to figure 3.3.6.1.

If UPS doesn’t support the battery self-test type, the battery self-test type will be grey. User only can select other self-test type that UPS support.

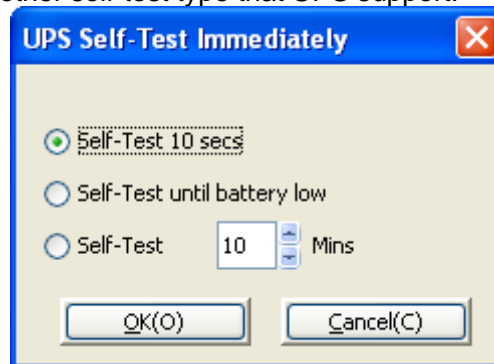


Figure 3.3.6.1

Schedule battery self-test

Open “UPS Test Manger” dialog by the “Battery Self-Test Schedule” item of “Device” menu. Please refer to figure 3.3.6.2.

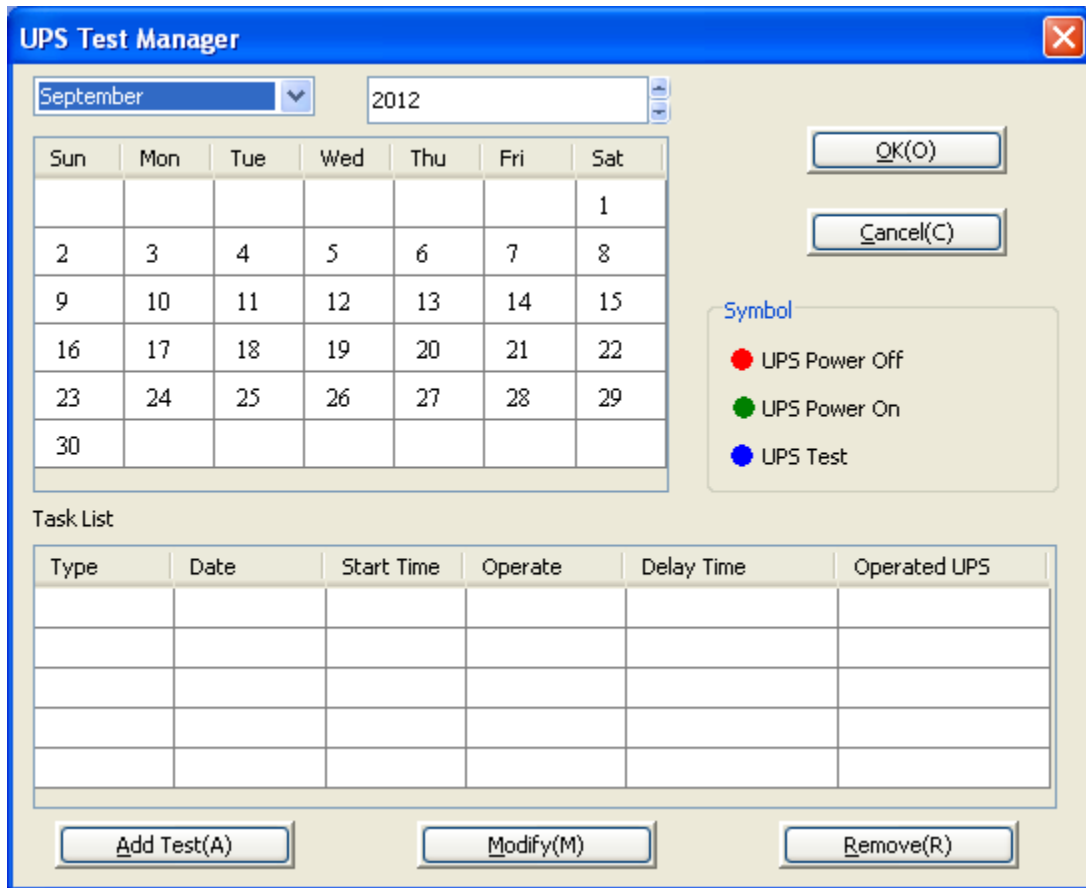


Figure 3.3.6.2

User can set battery self-test task on “UPS Test Manger” dialog: UPS battery self-test on the specific time and UPS battery self-test monthly. There are three battery self-test types selected: self-test for 10 seconds, self-test until battery low, self-test for N minutes.

The battery self-test task list and the calendar are shown on the dialog. On the calendar, the blue point is schedule battery self-test task. User can add schedule battery self-test task by “Add Test” button, modify or remove battery self-test task by “Modify” or “Remove” button.

The schedule battery self-test task can be shown on “View Schedule” dialog. The dialog can be opened by “View Schedule” item of “Device” menu. Please refer to figure 3.3.4.3.

User can cancel the current UPS battery test by “Cancel Current Battery Self-test” item of “Device” menu.

3.3.7 UPS log

Software monitors UPS, log UPS data and the abnormal event at the same time. Data and event log can help service engineer check problem.

3.3.7.1 Record setting

Open “Record setting” dialog by clicking “Record setting” item of “Logs” menu to configure log parameter. Such as how many event logs can be recorded, how many data log can be recorded, data log interval. Please refer to figure 3.3.7.1.

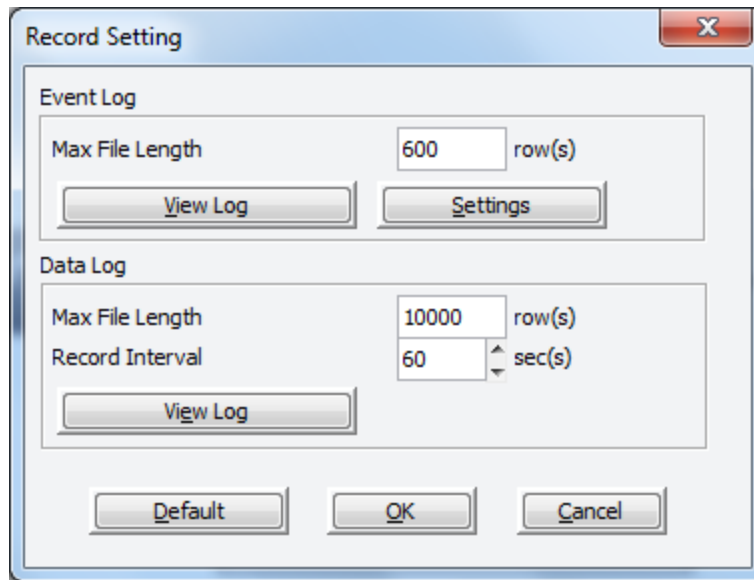


Figure 3.3.7.1

The default value of event log file is 600 rows. The max value of event log file can be set 10000 rows.

The default value of data log file is 10000 rows. The max value of data log file can be set 10000 rows.

The default data log interval is 60 seconds. The interval range can be set from 1 to 3600 seconds.

Note:


If the rows has met the max value, half of the older rows will be deleted, new log will append to the end of the remainder log.

3.3.7.2 Data log

Click "Data Log" item of "Logs" menu to open "Data Log Viewer" dialog to view data log, please refer to figure 3.3.7.2. Select each communication port to refer to specific UPS data logs, select all to refer to all UPS data logs.

Select the check box of each data log, and click "Delete" button to delete data log.

User can export data log file by "Export" button.

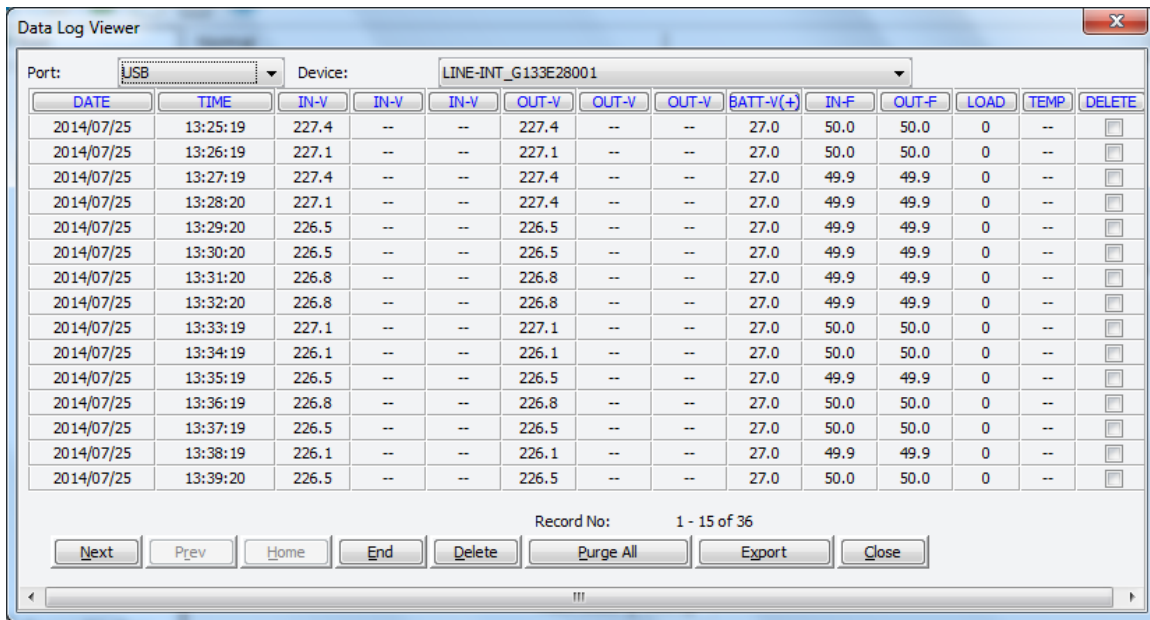

3.3.7.3 Event log

Event Log Viewer

Record No: 1 - 1 of 1

	DATE	TIME	EVENT TYPE	DELETE
	2014/07/25	13:14:19	Start Agent	

Next Prev Home End Delete Purge All Export Close

3.3.8 Load Segment Control setting

When the shutdown timer is 0, the setting means the load segment will shut down



immediately when AC fails.

When the shutdown timer is the value between 1 and 32767, the setting means the load segment will shut down after the setting value time when AC fails.

When the startup timer is -1, the setting means the load segment won't restart automatically when AC restores.

When the startup timer is 0, the setting means the load segment will restart immediately when AC restores.

When the startup timer is the value between 1 and 32767, the setting means the load segment will restart after the setting value time when AC restores.

The "Load Segment control" dialog of some UPS, such as figure 3.3.8.

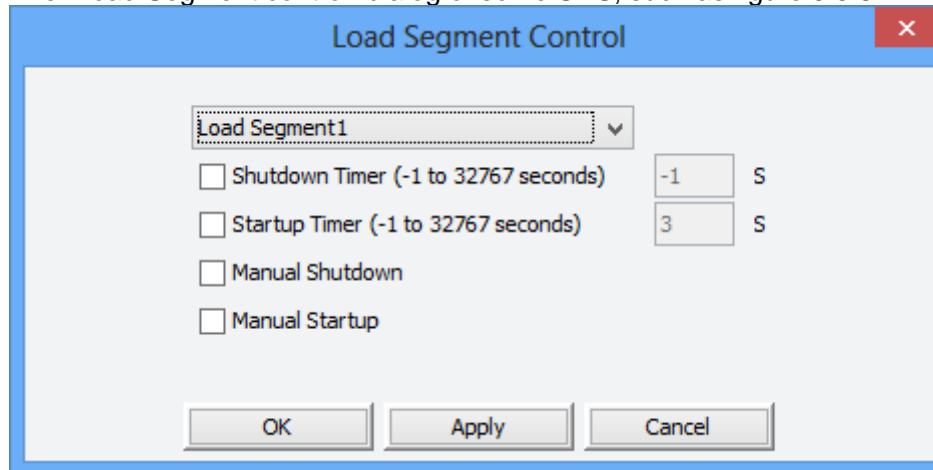


Figure 3.3.8

3.3.9 UPS model setting

Click "UPS Model Setting" item of "Device" menu to open "UPS Model Setting" dialog to rename UPS model and name, please refer to figure 3.3.9.

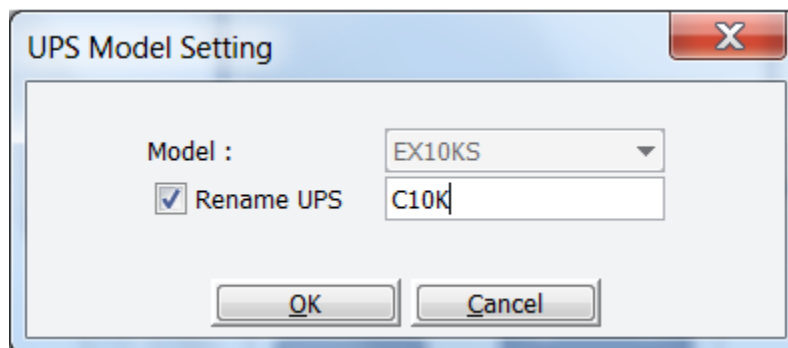


Figure 3.3.9

▲ For some UPS, the model can be detected automatically, the model can't be renamed. For some UPS, the model can't be detected automatically, the model can be renamed.

3.3.10 Battery test to low took less than setting minute

Select UPS node, click "Battery Test Setting" item of "Device" menu to configure the time for the "Warning if battery test to low time is less than _ Mins", The default value is 3 min


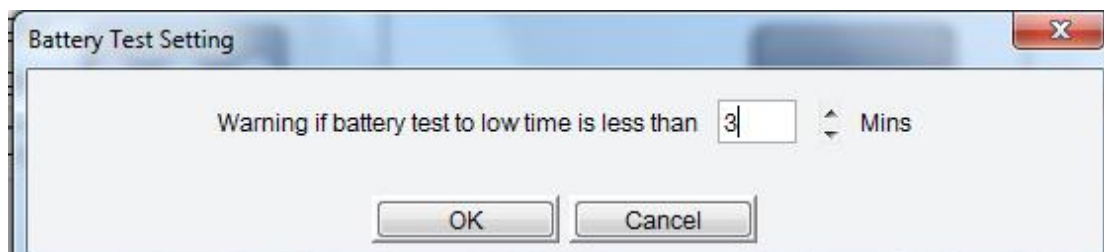


Figure 3.3.10

If the time for the “Battery self-test to low” is lower than the setting value, software will log the warning alarm “Battery test to low took less than setting minutes” and attach the actual battery self-test time, please refer to the below image

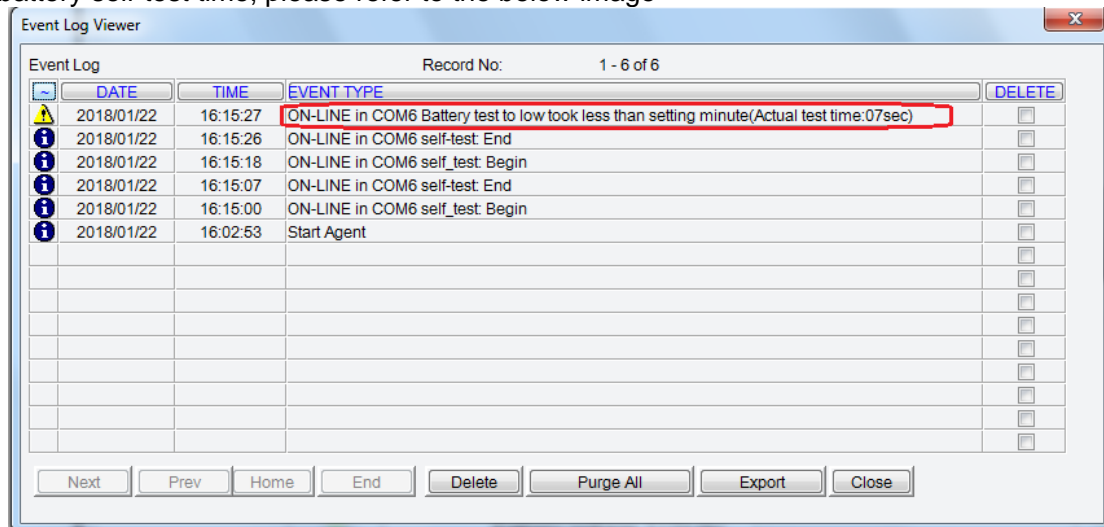

3.4 Warning event notification method

When UPS status is abnormal, software will notify user to let user learn UPS status as soon as possible, and then user can take action according to warning event notification.

1. Pop-up real time warning dialog
2. E-mail message alarm
3. SMS alarm

3.4.1 Real time warning dialog

When UPS status is abnormal, software will pop up warning dialog to notify user.

Warning dialog on local computer means that the warning dialog will pop up on local computer communicating with UPS when UPS status is abnormal.

Open “Event Action” dialog by clicking “Event Action” item of “Device” menu to set warning dialog pop-up or not. Please refer to figure 3.4.1.


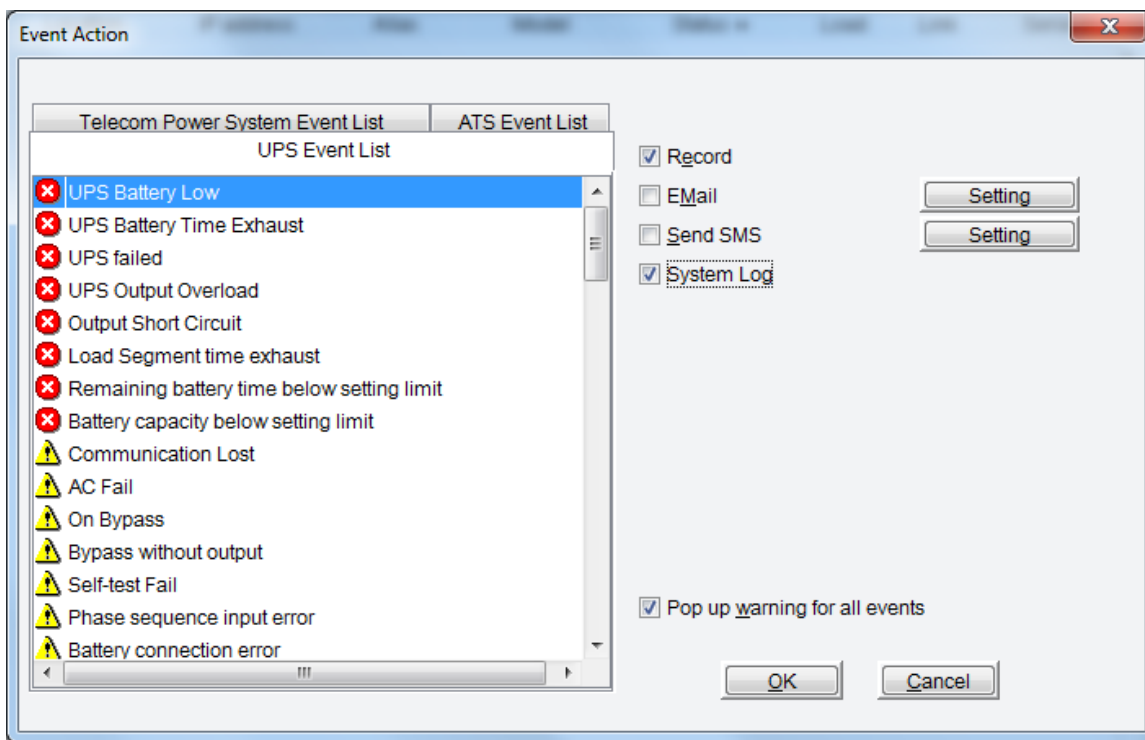


Figure 3.4.1

3.4.2 E-mail notification

When UPS status is abnormal, software will send E-mail notification about abnormal event. Open “E-mail Settings” dialog by clicking “E-mail Setting” item of “Tools” menu. Please refer to figure 3.4.2.

User also can open “Event Action” dialog by clicking “Event Action” item of “Device” menu to set E-mail function.

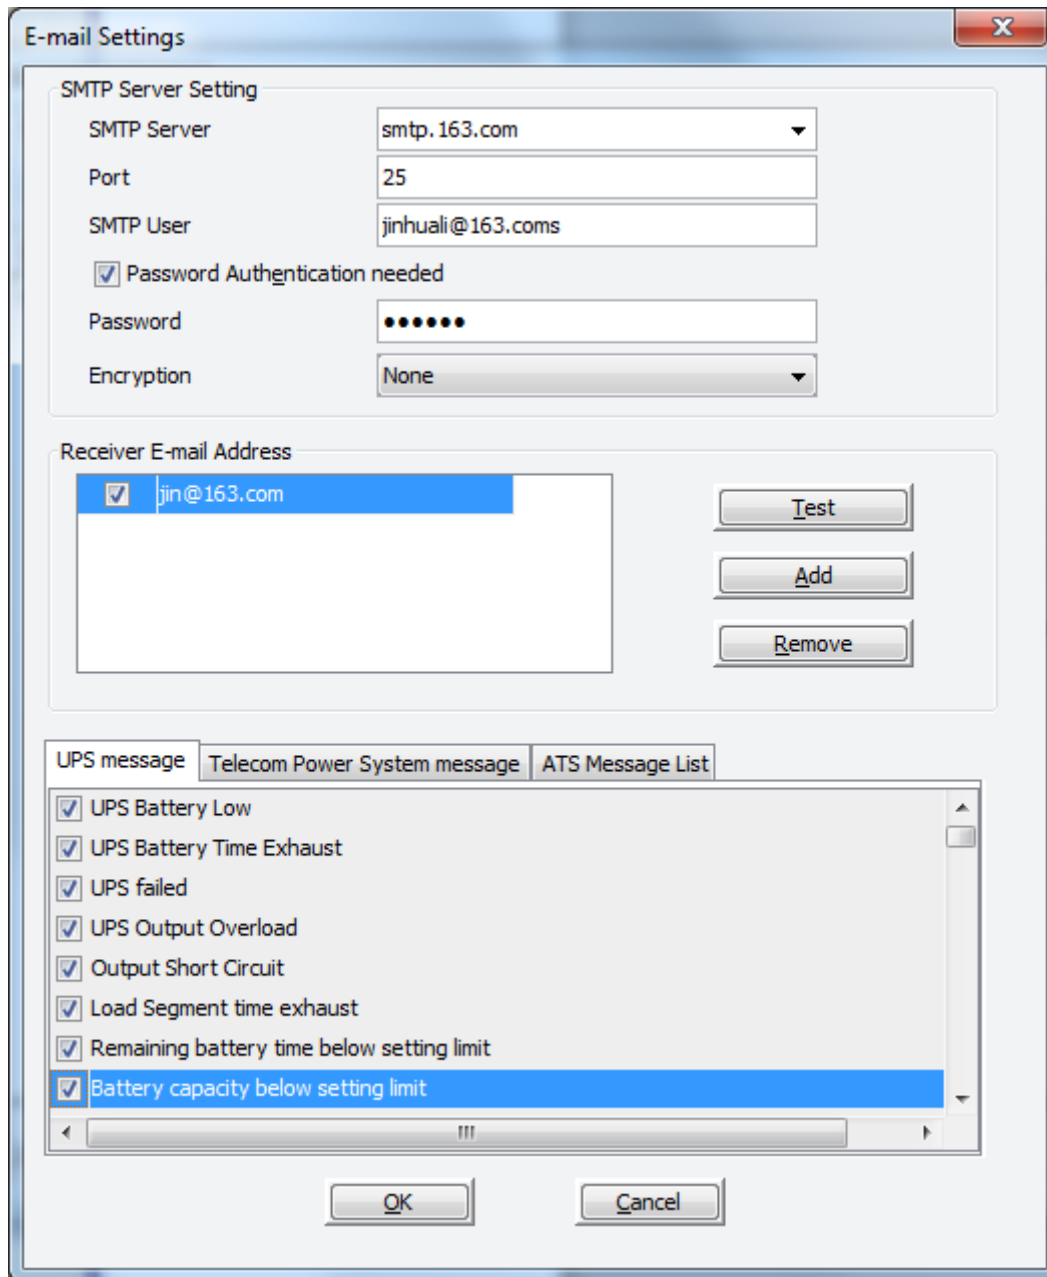

The image shows a Windows-style dialog box titled "E-mail Settings". It has a standard title bar with a close button (X). The dialog is divided into several sections. The first section, "SMTP Server Setting", contains fields for "SMTP Server" (smtp.163.com), "Port" (25), "SMTP User" (jinhuali@163.com), a checked checkbox for "Password Authentication needed", a "Password" field (masked with dots), and an "Encryption" dropdown set to "None". The second section, "Receiver E-mail Address", features a list box with "jin@163.com" selected, and buttons for "Test", "Add", and "Remove". The third section has three tabs: "UPS message" (selected), "Telecom Power System message", and "ATS Message List". Under the "UPS message" tab is a list of events with checkboxes: "UPS Battery Low", "UPS Battery Time Exhaust", "UPS failed", "UPS Output Overload", "Output Short Circuit", "Load Segment time exhaust", "Remaining battery time below setting limit", and "Battery capacity below setting limit" (which is selected). At the bottom are "OK" and "Cancel" buttons.

Figure 3.4.2

SMTP server name is the SMTP server to send e-mail to user. User can input SMTP server name or server IP address according to SMTP server.

The name and phone number of sender information can be set by user, the setting information will be shown in e-mail content.

After you add user e-mail address and select the abnormal event in the event list and select e-mail address, when the abnormal event happens, software will send e-mail to the e-mail address.

▲ There are 20 e-mail addresses in the list at most.

3.4.3 SMS notification

When UPS status is abnormal, software will send SMS notification about abnormal event. Open "SMS Setting" dialog by clicking "SMS Setting" item of "Tools" menu. Please refer to figure 3.4.3.



User also can open “Event Action” dialog by clicking “Event Action” item of “Device” menu to set SMS function.

Figure 3.4.3

Select port that connects with modem. The modem should support GSM function. Select the baud rate, such as 9600. The value is different depending on different modem model. Here, attention should be paid: if users have previously used to send short messages with other software, the software will be the default baud rate into previous baud rates, so you should test one by one to find proper SMS baud rate.

Select the abnormal event in the event list and select phone number, when the abnormal event happens, software will send SMS to the phone number. Click “Test” button to test SMS sent successfully or not.

▲ There are 5 phone numbers in the list at most.

3.5 System shutdown protection



System shutdown protection: protect system shutdown safely before UPS output shutdown when AC fails. Safely shut down server and the applications running on server to avoid damage.

Software can shut down the local computer communicating with UPS, and also can shut down the remote computer whose input is from UPS output.

3.5.1 Local computer shutdown protection

Local computer shutdown protection: Safely shut down the computer communicating with UPS before UPS output is shut down. Click “shutdown parameter” item of “Device” menu to open “shutdown settings” dialog, please refer to figure 3.5.1.

Select the checkbox of “System”, and then select system hibernation or shutdown.

If user selects “Shutdown” to protect computer, software will shut down computer once condition is met. If select “Hibernation” to protect computer, software will hibernate computer once condition is met.

Run command file before shutdown, the function means that software will run the command file before system shutdown. Select the checkbox of “Run command file before shutdown” and add the correct path of the command file by “Browse” button. Please make sure the command file can be executed normally on the system before setting the file path to software.

▲ In earlier versions of Windows all services run in Session 0 along with applications. This situation poses a security risk. In Windows Vista, and later versions of Windows, the operating system isolates services in Session 0 and runs applications in other sessions. Our software Agent is run in Session 0 so if a command file launches a .exe that .exe will be launched in Session 0 and not visible to the logged in users. In this situation, user must select the non-service option of the run mode in “shutdown settings” dialog to run command file normally.

▲ About UPS output shutdown setting and shutdown condition please refer to section 3.3.4 and section 3.3.8

▲ If the UPS has load segment function, user can set system powered by which one load segment in “Shutdown Settings” dialog, software will shut down system before load segment shutdown.



Shutdown Settings

Shutdown Options

USB LINE-INT_000000000

☒ Allow battery to discharge for 10 min

☒ Begin Shutdown Immediately when Battery is Low

☒ Begin Shutdown when UPS Battery is at 40 % Capacity or lower

☒ Shut down when remaining battery time is below 2 min

☒ System ☒ Shut down ☐ Hibernate ☐ Multi-UPS input

☒ Shut down UPS

Time needed for system shutdown 2 min

Powered by

☐ Accept Remote Shutdown signal from other Agent

0 min shutdown system

☐ Run Command File before Shutdown Browse..

Shutdown File Max Execution Time 1 min

Run Mode ☒ Service ☐ Non-Service

☐ Shutdown remote Linux/Unix/NAS by SSH before Shutdown SSH Configure

☐ Shutdown ESXi hosts and VMs before Shutdown ESXi Configure

Shutdown Remote Agents

Shutdown Conditions	Agent is shutdown

Add Modify Remove

Shutdown Alarm Parameters

Shutdown Alarm Interval 1 min

Scheduled Shutdown Countdown warning 10 min

OK Cancel

Figure 3.5.1

From version 5.8.0.0, you can shut down the OS by SNMP devices, Please add the SNMP device via "SNMP->Search Device" firstly, set the shutdown parameters of the SNMP device separately.

From version 5.8.0.0, "Local Setting" and "Remote Setting" are displayed in two panels.

Shutdown Settings

Local Setting
Remote Setting

SNMP

172.18.139.52

☐ Allow battery to discharge for

10
min

☐ Begin Shutdown Immediately when Battery is Low

☐ Begin Shutdown when UPS Battery is at

40

% Capacity or lower

☐ Shut down when remaining battery time is below

2
min

☒ System
☒ Shut down
☐ Hibernate
☐ Multi-UPS input

☐ Shut down UPS

Time needed for system shutdown

2
min

Powered by

Load Segment1

☐ Accept Remote Shutdown signal from other Agent

0
min shutdown system

Add

Remove

☐ Run Command File before Shutdown

Browse..

Shutdown File Max Execution Time

1
min

Run Mode
☒ Service
☐ Non-Service

☐ Shutdown remote Linux/Unix/NAS by SSH before Shutdown

SSH Configure

☐ Shutdown ESXi hosts and VMs before Shutdown

ESXi Configure

Shutdown Alarm Parameters

Shutdown Alarm Interval

1
min

Scheduled Shutdown Countdown warning

10
min

Note: SNMP shutdown only shuts down the local OS and does not shut down the UPS output. The UPS output is shut down through the SNMP card. In addition, pay attention to the time setting here and the time setting of the UPS output off on the card. The UPS shutdown time cannot be earlier than the OS shutdown time set by Winpower.

3.5.2 Remote computer shutdown protection

Remote computer shutdown protection: software installed on local computer will send shutdown command to safely shut down the remote computers before UPS output is shut down.

Settings of local computer communicating with UPS:

When software wants to shut down the remote computer, software communicating with UPS should set the condition and the IP address of remote to shut down remote computer, when the condition is met, software will send shutdown command to remote computer. For example: if the remote computers IP are 172.18.139.124. User can set



the remote computers shutdown condition by “Add” button. Please refer to figure 3.5.2.1. User can select the shutdown condition and then modify or delete the condition by “Modify” button and “Delete” button.

Shutdown Settings

Shutdown Options

USB LINE-INT_000000000

☒ Allow battery to discharge for 10 min

☒ Begin Shutdown Immediately when Battery is Low

☒ Begin Shutdown when UPS Battery is at 40 % Capacity or lower

☒ Shut down when remaining battery time is below 2 min

☒ System ☒ Shut down ☐ Hibernate ☐ Multi-UPS input

☒ Shut down UPS

Time needed for system shutdown 2 min

Powered by

☐ Accept Remote Shutdown signal from other Agent

0 min shutdown system

☐ Run Command File before Shutdown

Shutdown File Max Execution Time 1 min

Run Mode ☒ Service ☐ Non-Service

☐ Shutdown remote Linux/Unix/NAS by SSH before Shutdown

☐ Shutdown ESXi hosts and VMs before Shutdown

Shutdown Remote Agents

Shutdown Conditions	Agent is shutdown
LINE-INT_000000000 in USB Discharge 2 min	172.18.139.51

Shutdown Alarm Parameters

Shutdown Alarm Interval 1 min

Scheduled Shutdown Countdown warning 10 min

OK Cancel

Figure 3.5.2.1

Settings of remote computer:

The same software should be installed on remote computer to accept shutdown command. Click “shutdown parameter” item of “Device” menu to open “shutdown settings” dialog, and then set “remote shut down by agent” and add remote computer IP



communicating with UPS to accept remote shutdown command. For example: if computer accepts the remote shutdown command from remote computer (IP address is 172.18.139.33). The setting is as figure 3.5.2.2. User can set the delay time to shut down computer after receiving shutdown command from remote computer according to actual condition. The default value of delay time is 0. That means computer will shut down immediately when receiving shutdown command from remote computer.

Shutdown Settings

Shutdown Options

☐ Allow battery to discharge for 999 min

☐ Begin Shutdown Immediately when Battery is Low

☐ Begin Shutdown when UPS Battery is at 90 % Capacity or lower

☐ Shut down when remaining battery time is below 10 min

☐ System ☒ Shut down ☐ Hibernate ☐ Multi-UPS input

☐ Shut down UPS

Time needed for system shutdown 999 min

Powered by Load Segment1

☒ Accept Remote Shutdown signal from other Agent 172.18.139.33 Add Remove

0 min shutdown system

☐ Run Command File before Shutdown Browse..

Shutdown File Max Execution Time 1 min

Run Mode ☒ Service ☐ Non-Service

☐ Shutdown remote Linux/Unix/NAS by SSH before Shutdown SSH Configure

☐ Shutdown ESXi hosts and VMs before Shutdown ESXi Configure

Shutdown Remote Agents

Shutdown Conditions	Agent is shutdown

Add Modify Remove

Shutdown Alarm Parameters

Shutdown Alarm Interval 1 min

Scheduled Shutdown Countdown warning 10 min

OK Cancel

Figure 3.5.2.2



3.5.3 Remote Linux/Unix/NAS computer shutdown protection

Remote **Linux/Unix/NAS** computer shutdown protection: software installed on local computer will send shutdown command to safely shut down the remote computers before UPS output is shut down.

Settings of local computer communicating with UPS, user should select the option of Shutdown remote Linux/Unix/NAS by SSH before Shutdown, please refer to figure 3.5.3.1, and add the IP of **Linux/Unix/NAS** computer by click SSH Configure button, please refer to figure 3.5.3.2.

Shutdown Settings

Shutdown Options

USB LINE-INT_000000000

☒ Allow battery to discharge for 2 min

☒ Begin Shutdown Immediately when Battery is Low

☒ Begin Shutdown when UPS Battery is at 40 % Capacity or lower

☐ Shut down when remaining battery time is below 2 min

☒ System ☒ Shut down ☐ Hibernate ☐ Multi-UPS input

☒ Shut down UPS

Time needed for system shutdown 2 min

Powered by

☒ Accept Remote Shutdown signal from other Agent 172.18.139.33 Add Remove

0 min shutdown system

☐ Run Command File before Shutdown Browse..

Shutdown File Max Execution Time 1 min

Run Mode ☒ Service ☐ Non-Service

☒ Shutdown remote Linux/Unix/NAS by SSH before Shutdown SSH Configure

☐ Shutdown ESXi hosts and VMs before Shutdown ESXi Configure

Shutdown Remote Agents

Shutdown Conditions Agent is shutdown Add Modify Remove

Shutdown Alarm Parameters

Shutdown Alarm Interval 1 min

Scheduled Shutdown Countdown warning 10 min

OK Cancel

Figure 3.5.3.1

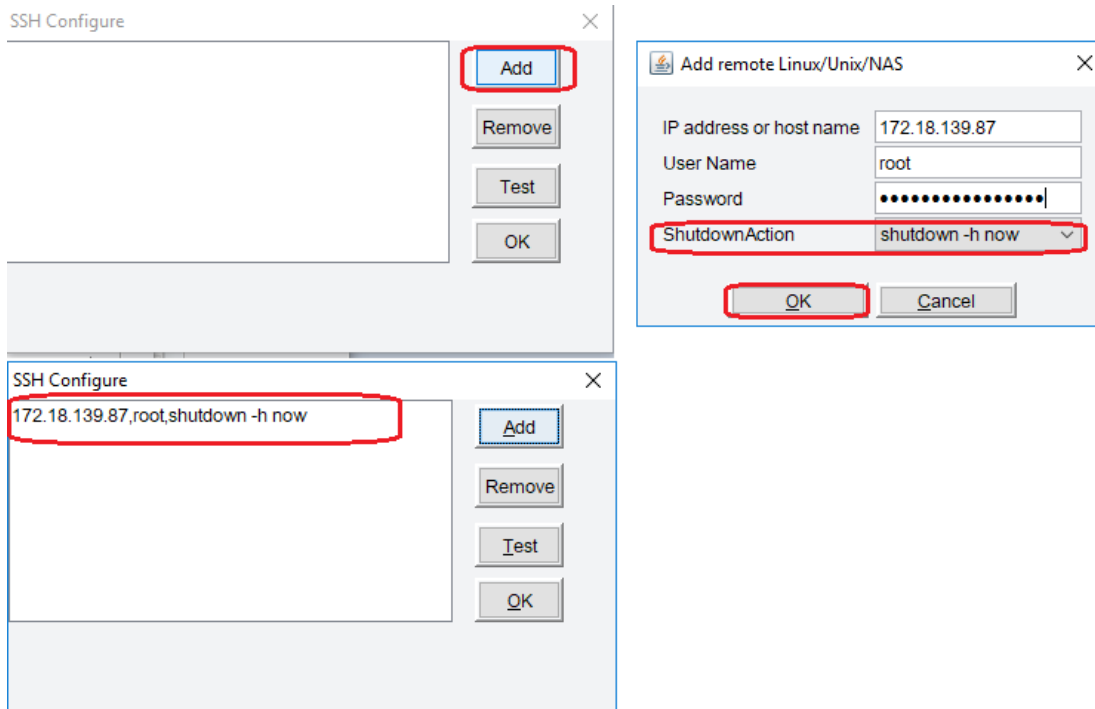


Figure 3.5.3.2

▲ The number of remote computers is unlimited
▲ Please ensure that the remote computer supports SSH shutdown mode. The software provides five kinds of shutdown commands for selection:

- a. shutdown -h now;
- b. shutdown
- c. init 5
- d. init 0
- e. poweroff

Please use the command to test the SSH shutdown command is enabled before the software is shut down. Then you can add the IP, user name, password of the remote computer, and the shutdown method is in the list.

3.5.4 ESXi host and VMs shutdown protection

Remote **ESXi host and VMs** shutdown protection: software installed on local computer will send shutdown command to safely shut down the remote ESXi host and VMs before UPS output is shut down.

Settings of local computer communicating with UPS, user should select the option of Shutdown ESXi host and VMs before Shutdown, please refer to figure 3.5.4.1, and add the IP of **ESXi host** by click ESXi Configure button, please refer to figure 3.5.4.2.



Shutdown Settings

Shutdown Options

USB LINE-INT_000000000

☒ Allow battery to discharge for 2 min

☒ Begin Shutdown Immediately when Battery is Low

☒ Begin Shutdown when UPS Battery is at 40 % Capacity or lower

☐ Shut down when remaining battery time is below 2 min

☒ System ☒ Shut down ☐ Hibernate ☐ Multi-UPS input

☒ Shut down UPS

Time needed for system shutdown 2 min

Powered by

☒ Accept Remote Shutdown signal from other Agent 172.18.139.33 Add Remove

0 min shutdown system

☐ Run Command File before Shutdown Browse..

Shutdown File Max Execution Time 1 min

Run Mode ☒ Service ☐ Non-Service

☒ Shutdown remote Linux/Unix/NAS by SSH before Shutdown SSH Configure

☒ Shutdown ESXi hosts and VMs before Shutdown ESXi Configure

Shutdown Remote Agents

Shutdown Conditions	Agent is shutdown

Add Modify Remove

Shutdown Alarm Parameters

Shutdown Alarm Interval 1 min

Scheduled Shutdown Countdown warning 10 min

OK Cancel

Figure 3.5.4.1

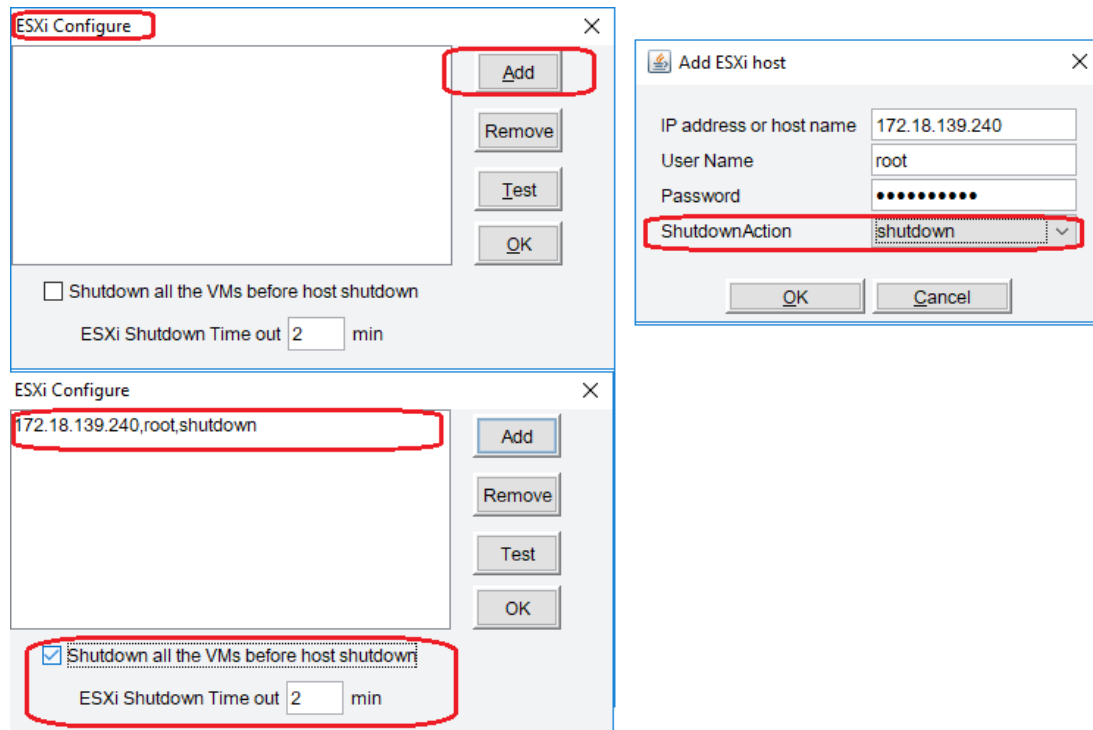


Figure 3.5.4.2

- ▲ The number of remote ESXi host is unlimited
- ▲ The software provides three kinds of shutdown commands for selection:
 - a. shutdown
 - b. standby
 - c. poweroff
- ▲ Software can be installed on anyone VMs communicating with UPS
- ▲ Software can be installed on other OS (doesn't matter with ESXi and VMs) communicating with UPS

3.5.5 Set the Shutdown parameters via localShutdownConfig.json

From the version 6.1.0.0, Winpower can set the shutdown parameters of the local agent via json configuration (only refers to RS232 and USB)

After searches devices, if any RS232/USB devices are found, it will write the shutdown parameters to localShutdownConfig.json automatically.

By modifying the parameter values in localShutdownConfig.json, the shutdown parameters of the corresponding device can be set after restart the agent.

For example:

```
1  [
2  {
3      "portName": "COM4",
4      "deviceName": "ON-LINE_161010-23830001",
5      "enableShutdownBackupTime": true,
6      "batteryBackupTime": 10,
7      "enableShutdownBatteryLow": true,
8      "enableShutdownRemainingCapacity": false,
9      "remainingCapacity": 40,
10     "enableShutdownRemainingTime": false,
11     "remainingTime": 2,
12     "enableShutdownSystem": true,
13     "enableShutdownUPS": true,
14     "upsOffDelayTime": 2,
15     "shutdownByLoadSegment": 0
16 },
17 {
18     "portName": "COM5",
19     "deviceName": "LINE-INT_715318A00018",
20     "enableShutdownBackupTime": false,
21     "batteryBackupTime": 10,
22     "enableShutdownBatteryLow": true,
23     "enableShutdownRemainingCapacity": false,
24     "remainingCapacity": 40,
25     "enableShutdownRemainingTime": false,
26     "remainingTime": 2,
27     "enableShutdownSystem": true,
28     "enableShutdownUPS": true,
29     "upsOffDelayTime": 2,
30     "shutdownByLoadSegment": 1
31 },
32 {
33     "portName": "USB",
34     "deviceName": "LINE-INT_0000000000",
35     "enableShutdownBackupTime": false,
36     "batteryBackupTime": 10,
37     "enableShutdownBatteryLow": true,
38     "enableShutdownRemainingCapacity": false,
39     "remainingCapacity": 40,
40     "enableShutdownRemainingTime": false,
41     "remainingTime": 2,
42     "enableShutdownSystem": true,
43     "enableShutdownUPS": true,
44     "upsOffDelayTime": 2,
45     "shutdownByLoadSegment": -1
46 }
47 ]
```

Figure 3.5.5.1

Note:

▲ Please don't modify the portName and deviceName values, Otherwise the shutdown parameters of the corresponding device are invalid.

▲ The parameter "enableShutdownBackupTime" means "Allow battery to



discharge for”

▲ The parameter “batteryBackupTime” means “The timer value for battery discharge shutdown”

▲ The parameter “enableShutdownBatteryLow” means “Begin Shutdown Immediated when Battery is Low”

▲ The parameter “enableShutdownRemaningCapacity” means “Begin Shutdown when UPS Battery capacity at”

▲ The parameter “remaningCapacity” means “The capacity value for battery capacity shutdown”

▲ The parameter “enableShutdownRemainingTime” means “Shut down when remaining battery time is below”

▲ The parameter “remainingTime” means “The timer value for remaining battery shutdown”

▲ The parameter “enableShutdownSystem” means “Allow shutdown OS System”

▲ The parameter “enableShutdownUPS” means “Allow shutdown UPS”

▲ The parameter “shutdownByLoadSegment” means “Powered by”

-1 means don't support Loadsegemnt

0 means powered by Master

1 means powered by LS1

2 means powered by LS2

3.6 Remote monitoring device

3.6.1 Install software on different computer to monitor remote device

▲ The network should be OK between remote computer and local computer, user can use “ping” command to check network ok or not.

Note: the software installed on different computer should be the same version.

User can install software on different computer to view remote UPS on the network. For the computer with IPv4, all the computers with software in the same LAN will be shown on the LAN node automatically, and the UPS communicating with computer also will be shown below the computer name node. User can select remote UPS node to view the detail information. Please refer to figure 3.6.1.1

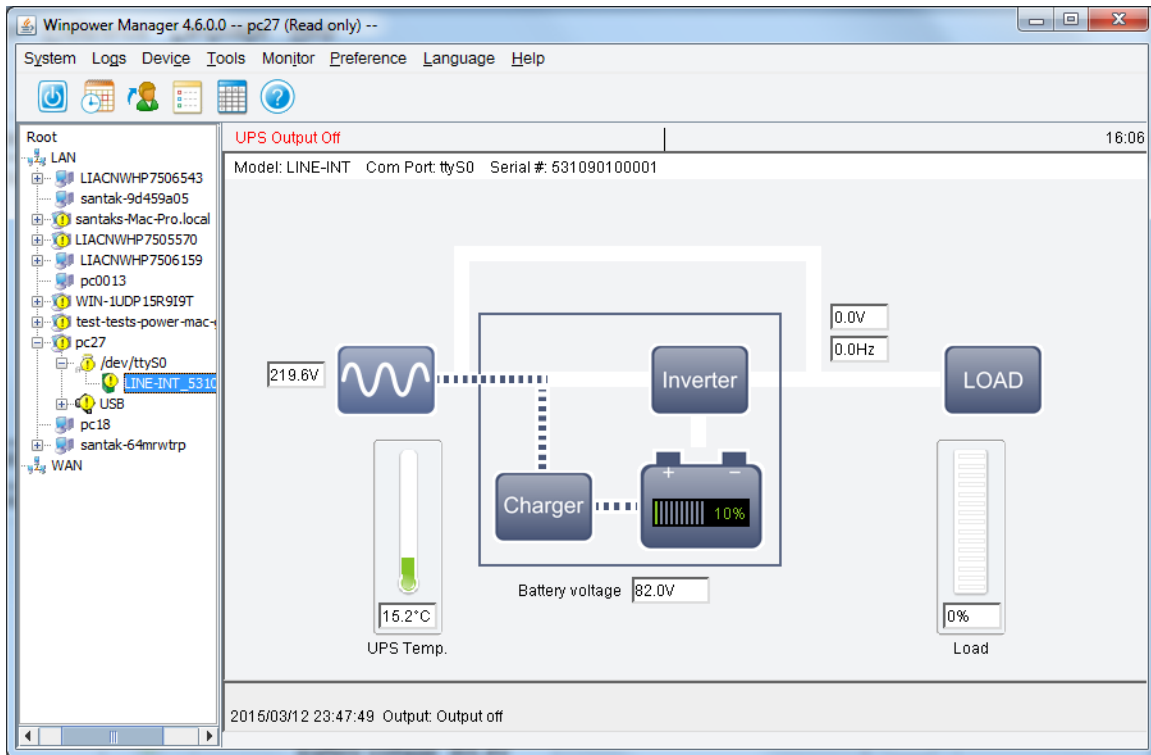


Figure 3.6.1.1

If the computer with IPv4 is not in the same LAN, the remote computer should be added on the WAN node via the “Monitor Remote Device” item of “Monitor” menu. Input the IP address of remote computer to add. Please refer to figure 3.6.1.2.

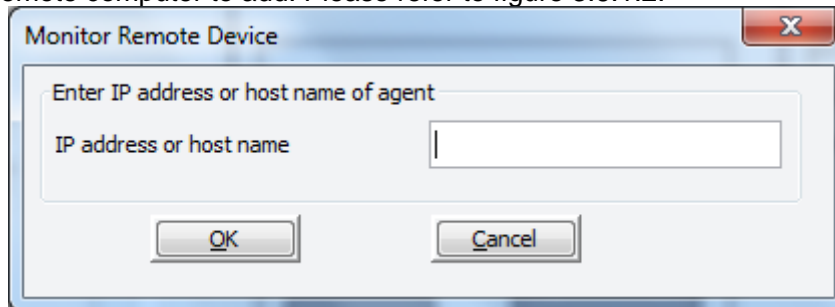


Figure 3.6.1.2

The remote computer name will be shown below the WAN node if the remote computer is added OK, User can select remote UPS node to view the detail information. Please refer to figure 3.6.1.3.

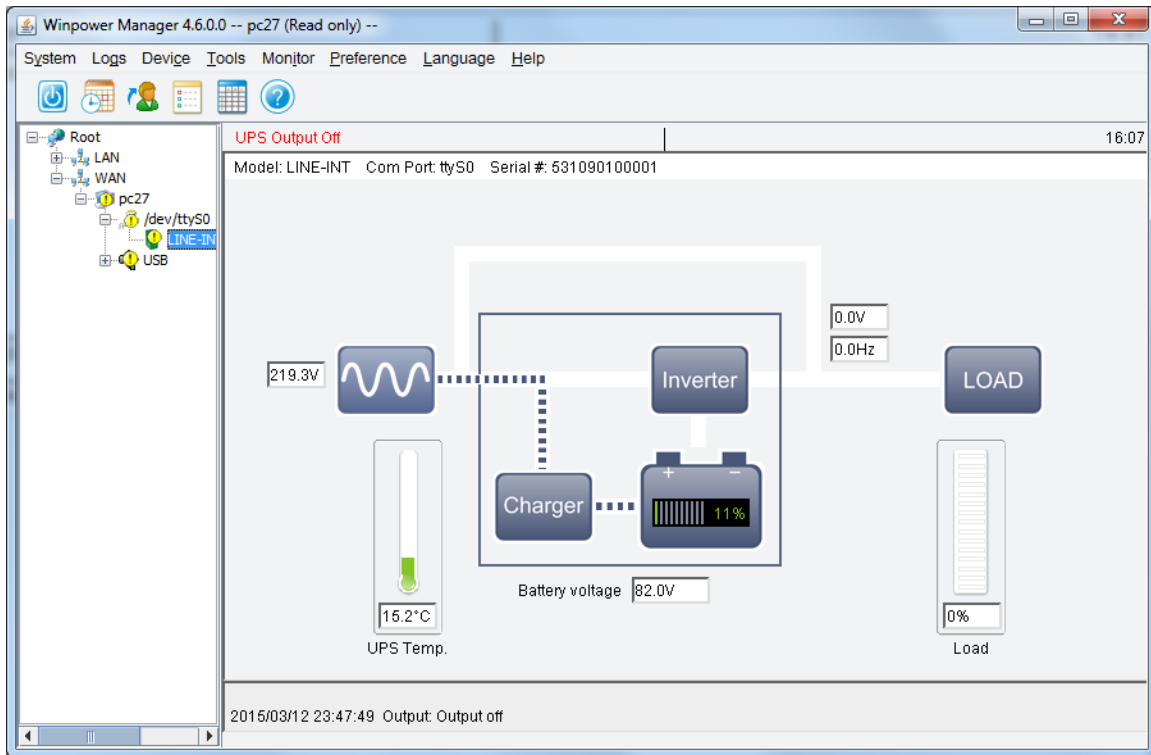


Figure 3.6.1.3

If software installed on remote computer accepts remote control, the check box of “accept remote control” is selected. Please refer to figure 3.6.1.4.

If software installed on remote computer doesn't accept remote control, the check box of “accept remote control” is not selected. Please refer to figure 3.6.1.5.

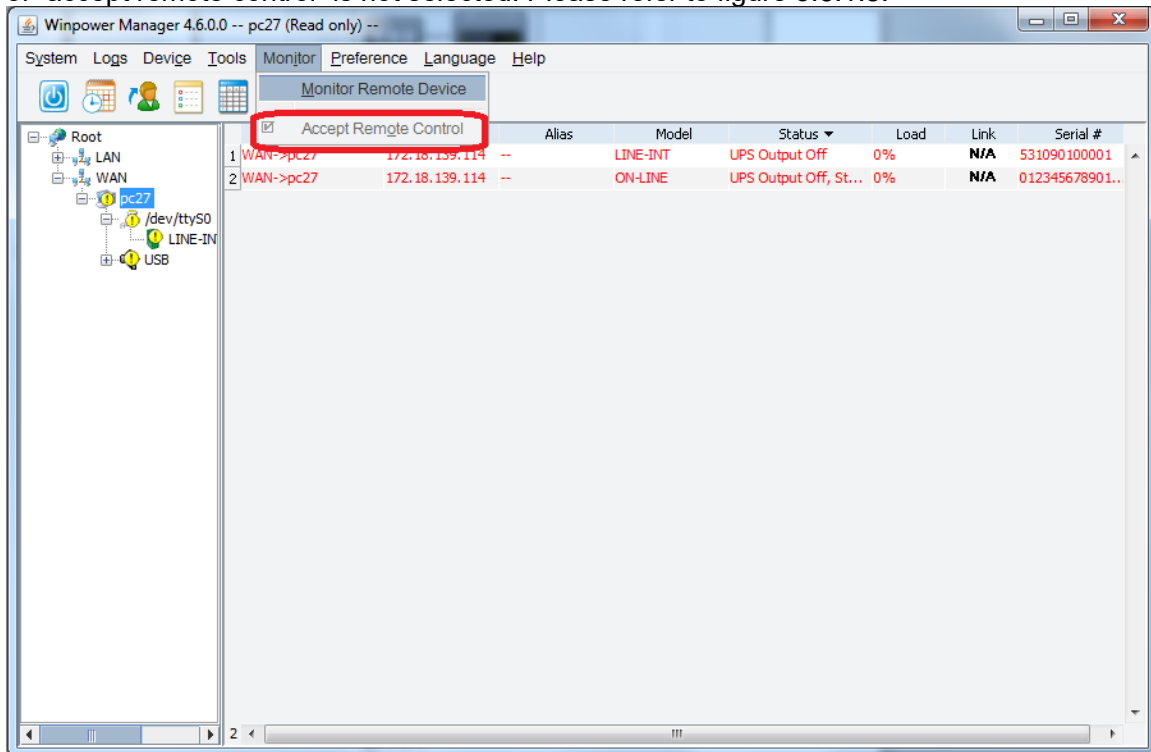


Figure 3.6.1.4

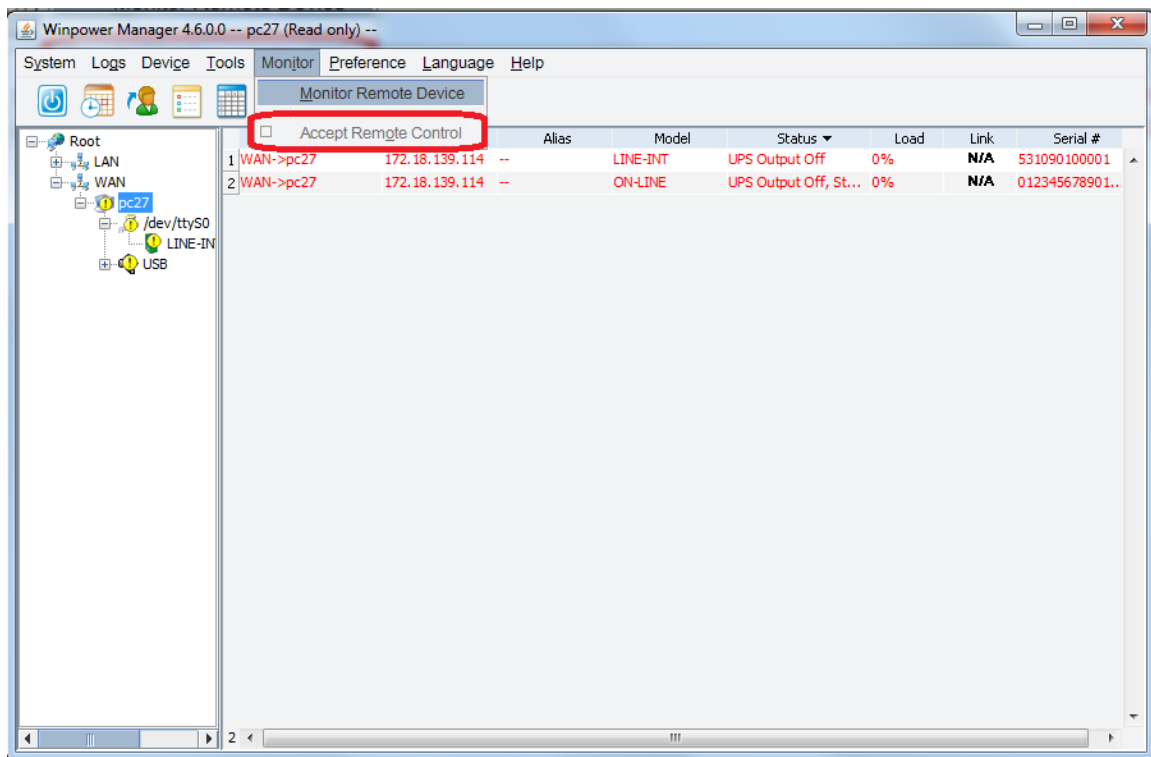


Figure 3.6.1.5

If the remote computer accepts remote control, select computer node, click “Act as Administrator” item of “System” menu to become software administrator, user can view UPS detail information, and also can configure remote UPS parameter setting, remote computer shutdown, and notification methods.

If the remote computer doesn't accept remote control, select the remote computer node, you will find “Act as Administrator” item of “System” menu is grey, user can't become software administrator, only can view UPS detail information, but can't configure remote UPS parameter setting, remote computer shutdown, and notification methods.

Note:

From the version 6.1.0.0, if the remote agent under the WAN tree communicated lost(with yellow exclamation mark, and no devices under this agent), all the dialog will be grey, you can't open any dialog.

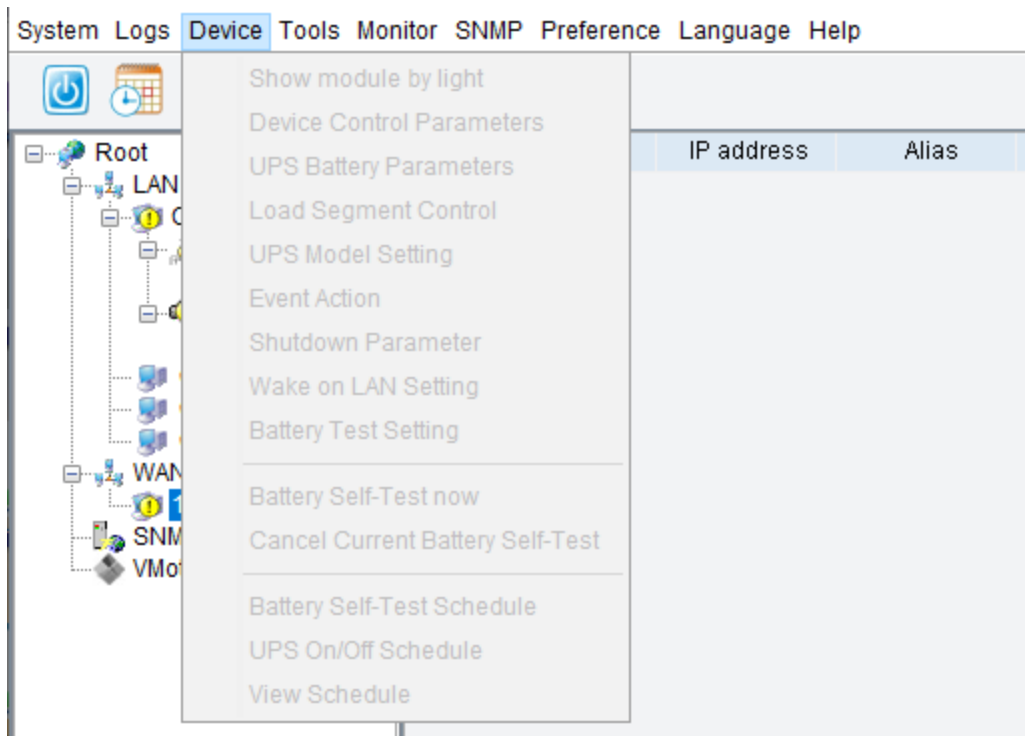


Figure 3.6.1.6

3.6.2 Webserver Function

Note: the OS should support JDK 1.8 at least, or the software won't work normally.

Software supports webserver function. User can view device status and operate battery test via mobile phone.

Input the web address: https://IP_address:8888, such as <https://172.18.139.80:8888>. UPS list will be shown. Please refer to figure 3.6.2.1. User also can scan the QR code to access to web address with the browser scanning function. User should click "View Server URL" item of "Monitor" menu to get QR code. **Note: if computer is configured with two or more network card, there will be a IP list displayed after user click "View Server URL" item of "Monitor" menu. To get the QR code, User should click every IP and try to get correct QR code.**

The default webserver port is 8888, if the port is in use by other software, user should click "Web Server Control" item of "Monitor" menu to open "Web Server Control" dialog, and change port to make sure webserver function work normally.

Click the "Language" item to change the language.

Click UPS name in the UPS list, the detail information about the UPS will be shown. The detail information includes UPS input, output, battery parameter, the two latest event and UPS status. Please refer to figure 3.6.2.2.

Click the "Home" item in UPS detail information page to return the UPS list page.

Click the "Control" item in UPS detail information page to operate battery test. Please refer to figure 3.6.2.3. For local UPS, user should input the password of agent and then set battery test task, please refer to section 3.1.1 to get the default password.

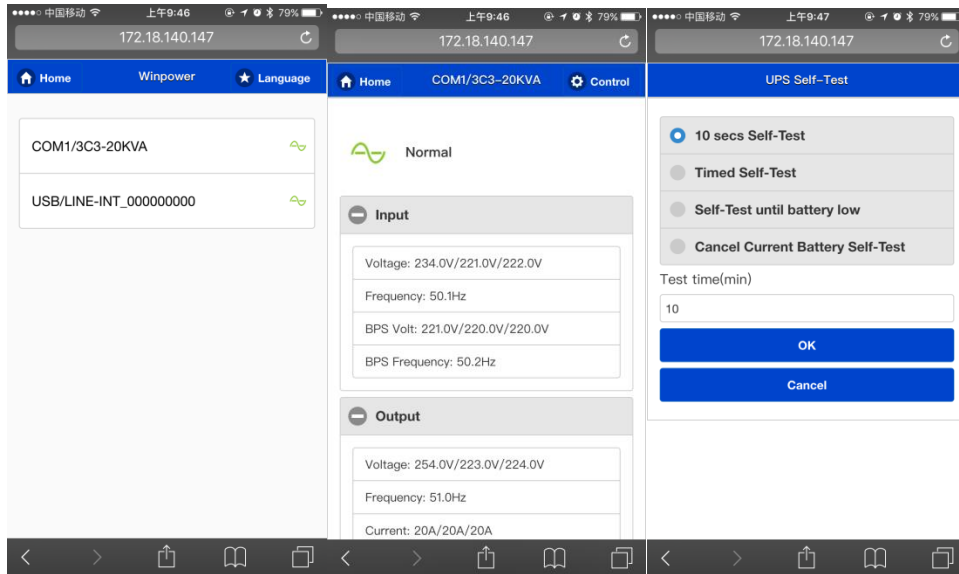


Figure 3.6.2.1

Figure 3.6.2.2

Figure 3.6.2.3

3.7 SNMP centralized monitoring

The SNMP centralized monitoring function can monitor the status of UPS with SNMP card located in different regions. Even if user is thousands of miles away, when the abnormal event of UPS happens, software will inform user of the abnormal event by sending SMS, E-mail, pop-up warning dialog. Thus, user can keep abreast of UPS status and prevent the damage caused by UPS abrupt shutdown.

Notice: software only can monitor the status of UPS with SNMP card, it can't shut down UPS output and shut down computer. When user wants to control UPS or protect computer, please refer to the user manual of SNMP card to learn the setting.

Application architecture diagram, please refer to figure 3.7.

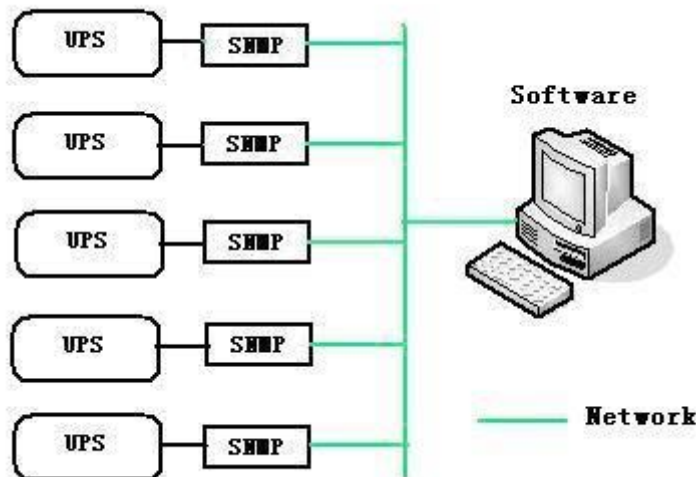


Figure 3.7

3.7.1 Becoming SNMP administrator

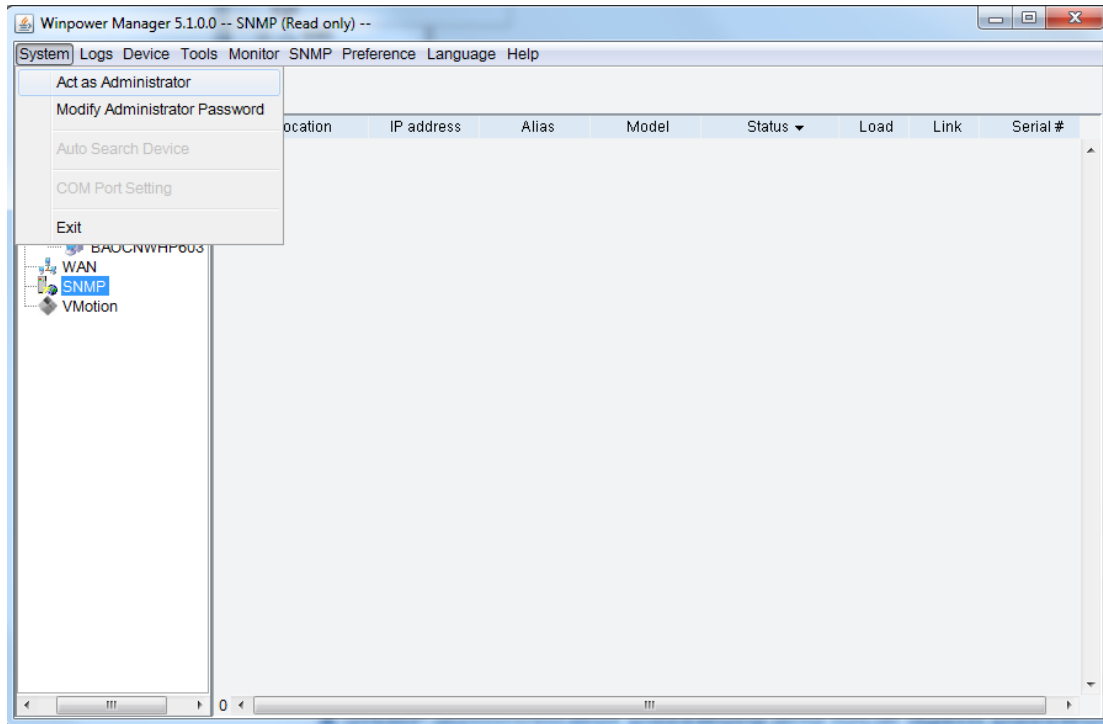


Figure 3.7.1

Select SNMP node, and click “Act as Administrators” item of “System” menu, Figure 3.7.1.

Initial default password is empty.

User can modify the password by click “Modify Administrator Password” item.

▲ **SNMP administrator password and local agent password are the same.**

3.7.2 Area management

Act as SNMP Administrator, click “Add Area” item of “SNMP” menu, there will be a dialog box pop-up for setting the area information. “Add Area” dialog box shown as figure 3.7.2.

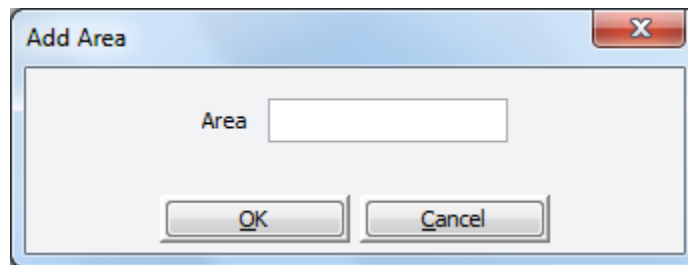


Figure 3.7.2

Input geographic location information in “area” text box, where UPS with SNMP card located at, such as Beijing, Shanghai and other location.

User can select SNMP node, and click right mouse button to select “Add area”. There will be a dialog box pop-up as figure 3.7.2, so you can make the area added.

After adding area successfully, the area name will be shown below the SNMP node in the tree diagram. Select area name and click right mouse button, user can modify or delete area. Of course, user can also select the “Modify area” or “Delete area” item of “SNMP” menu to modify or delete area.

3.7.3 UPS management

Act as SNMP Administrator, click “Search Device” item of “SNMP” menu, there will be a



dialog box pop-up for adding the UPS information. “Search Device” dialog box shown as figure 3.7.3.1(SNMP v1), 3.7.3.2(SNMP v2c), and 3.7.3.3(SNMP v3).

For IPv4, user can input the start IP address and end IP address, select SNMP version, input public community or other information of SNMP card correctly, and software will search SNMP UPS and add them under SNMP node.

For IPv6, user should input IPv6 address, select SNMP version, input public community or other information of SNMP card correctly, and software will search SNMP UPS and add them under SNMP node.

▲ Please note:

If the SNMP version of SNMP card is SNMP v1 or SNMP v2c, user should input the correct public community to make sure add SNMP device under SNMP node normally.

If the SNMP version of SNMP card is SNMP v3, user should correctly input the security level, user name, authentication type, authentication password and private password to make sure add SNMP device under SNMP node normally.

Search Device

Protocol Type: Protocol IPv4

SNMP Version: SNMP v1

Area Name: sdf

Start IP: 172 . 18 . 139 . 114

End IP: 172 . 18 . 139 . 116

SNMP Port: 161

Public Community: public

Found Device:

Added Device:

Search Cancel Close

Figure 3.7.3.1

Search Device

Protocol Type: Protocol IPv4

SNMP Version: SNMP v2c

Area Name: All Devices

Start IP: . . .

End IP: . . .

SNMP Port: 161

Public Community: public

Found Device:

Added Device:

Search Cancel Close

Figure 3.7.3.2



A screenshot of a Windows-style dialog box titled "Search Device". The dialog box has a blue title bar with a close button (X) in the top right corner. The main area contains several configuration fields:

- Protocol Type:** A dropdown menu with "Protocol IPv4" selected.
- SNMP Version:** A dropdown menu with "SNMP v3" selected.
- Area Name:** A dropdown menu with "All Devices" selected.
- Start IP:** A text input field with three blue dots, indicating an IP address.
- End IP:** A text input field with three blue dots, indicating an IP address.
- SNMP Port:** A text input field containing the number "161".
- Security Level:** A dropdown menu with "authPriv" selected.
- Authentication Type:** A dropdown menu with "MD5" selected.
- User Name:** A text input field.
- Authentication Password:** A text input field.
- Private Password:** A text input field.
- Found Device:** A label followed by a large empty space for a list of found devices.
- Added Device:** A label followed by a large empty space for a list of added devices.

At the bottom of the dialog box, there are three buttons: "Search", "Cancel", and "Close".

Figure 3.7.3.3

When the UPS is added successfully, the communication with software is OK. Select the UPS name, you can see the UPS flow diagram, and the detailed parameter information of the UPS, please refer to figure 3.7.3.4.

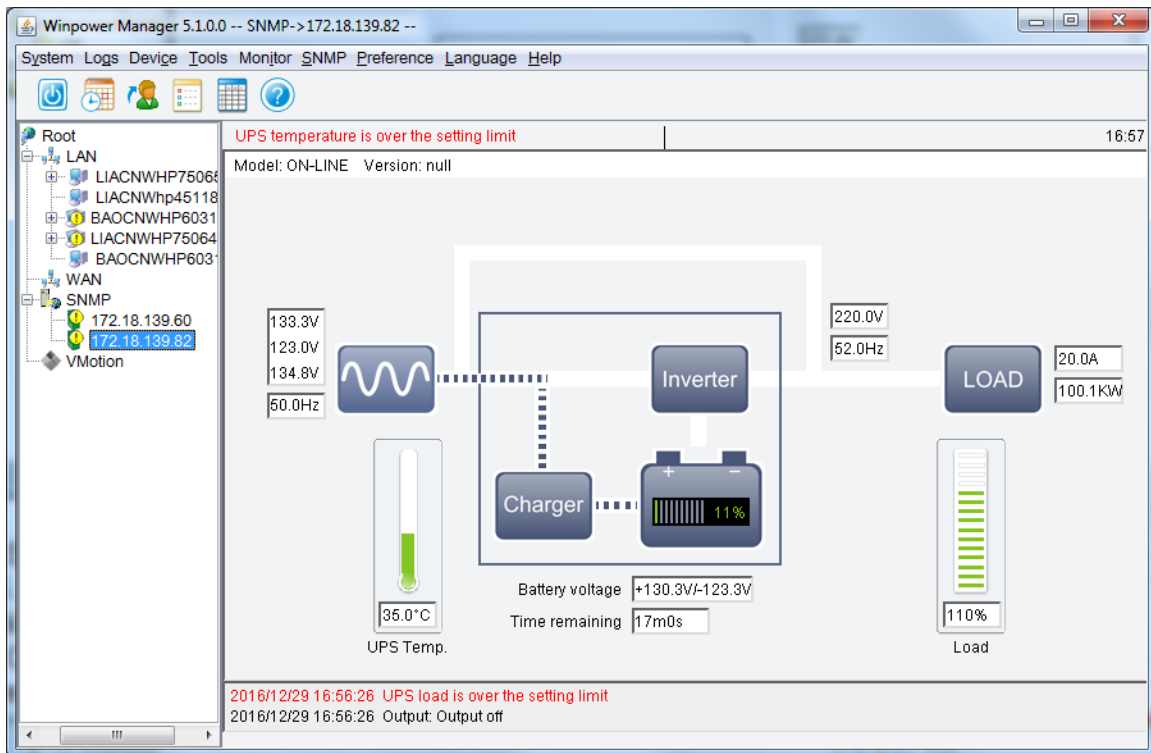


Figure 3.7.3.4

Select the UPS name, and click the right mouse button, user can modify or delete UPS. Of course, user can also select the "Modify device" or "Delete device" item of "SNMP" menu to modify or delete UPS.

Click the link in the UPS list, linked to the monitored SNMP Card Web, please refer to figure 3.7.3.5.

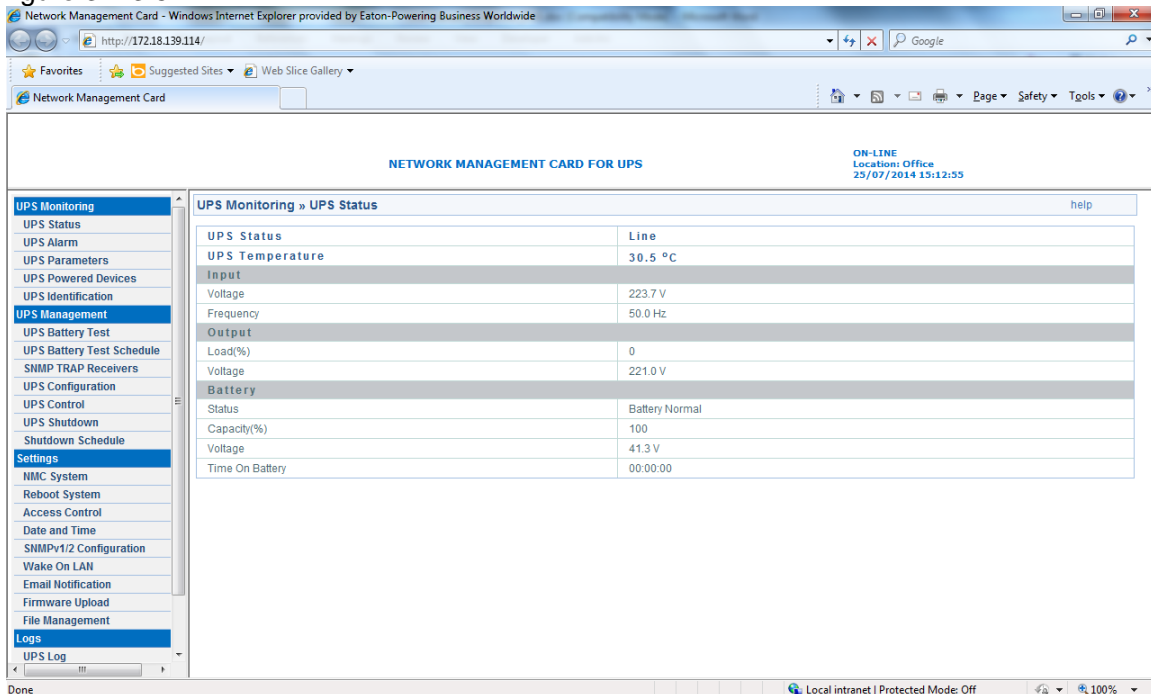


Figure 3.7.3.5



3.7.4 SNMP event log

Act as SNMP Administrator, click “SNMP Event Log” item of “SNMP” Menu, there will be a dialog box pop-up. Please refer to Figure 3.7.4.1.

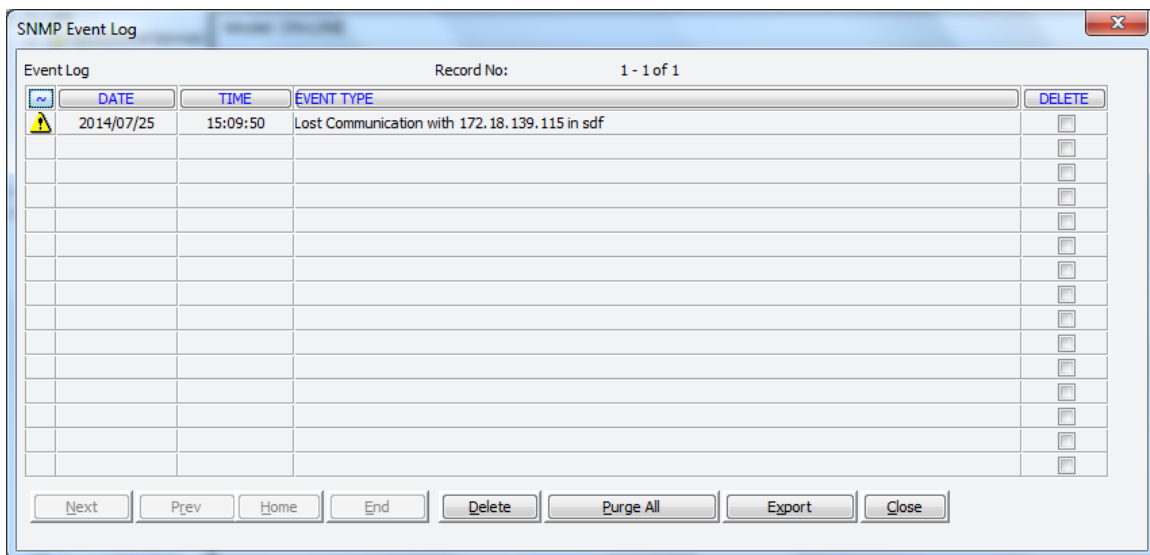


Figure 3.7.4.1

Click “Export” button to export all alarm event.

SNMP event record maximum length can be set. Act as SNMP Administrator, Click “Event Log Setting” item of “SNMP” Menu, there will be a dialog pop-up, as Figure 3.7.4.2. The default value is 5000, Maximum can be set 100000.

When the record exceeds the maximum, Software will delete the oldest event to record a new event automatically.

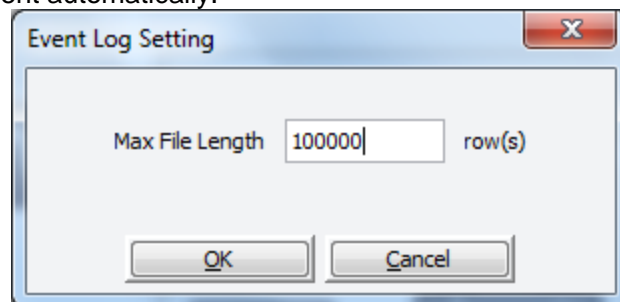


Figure 3.7.4.2

3.7.5 SNMP Trap Receiving Port Setting

Click “SNMP Trap Receiving Port Setting” item of “SNMP” Menu to open “SNMP Trap Receiving Port Setting” dialog. User can set SNMP trap receiving port. The default port is 162.

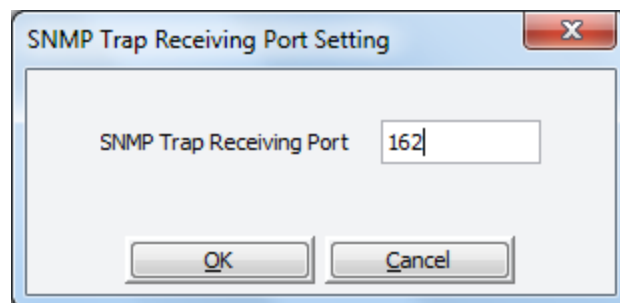


Figure 3.7.5

3.8 Wake on LAN function

Wake on LAN function: Once AC fails, software will shut down UPS output and computer. If AC restores and the computer with software restarts, the computer can wake up other computers in the LAN. The application is as figure 3.8.1. Open "Wake on LAN" dialog by click the "Wake on LAN setting" of "Device" menu, please refer to figure 3.8.2.

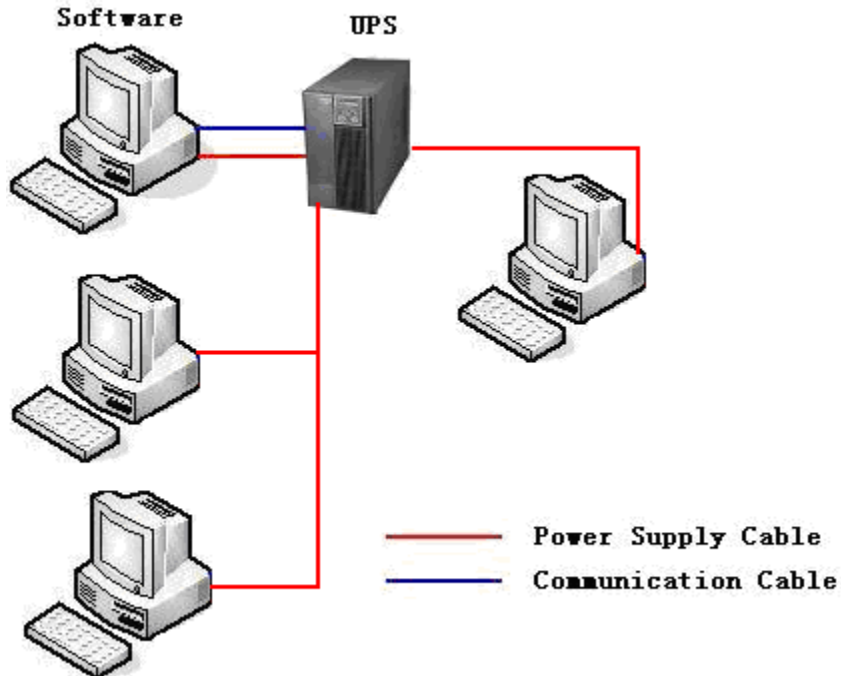


Figure 3.8.1

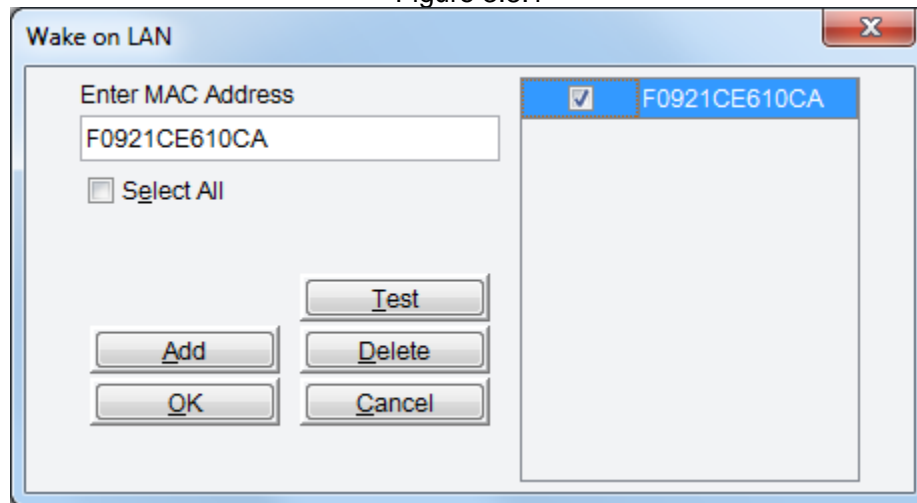


Figure 3.8.2

Add the MAC address of remote computers in the list. Select the check box of "Enable all wake on" to wake up all computers, when the conditions is met, remote computers will be woken up.

Select MAC address of remote computer, and then click "Test" button to test remote computer support wake on LAN function or not. Select MAC address of remote computer, and then click "Delete" button to delete the MAC address to remove computer address in the list.

▲ Use command "ipconfig -all" to view the MAC address of computer. The remote computer should support wake on LAN in BIOS setting. If the remote computer can't



be woken up on LAN, even user add the MAC address of remote computer in the list, the software wake on LAN function is invalid to the remote computer.

If remote computer also wants to shut down safely by software, the software should be installed on the remote computer. Once AC fails, software will shut down computer safely, please refer to section 3.5.2.

3.9 Preference

3.9.1 Temperature unit

User can select temperature unit according to personal habit, click “Temp” item of “Preference” menu to select: Centigrade (C) or Fahrenheit (F).

3.9.2 Date format

User can select date format, click “DateFormat” item of “Preference” menu to select: year/month/day, month/day/year or day/month/year.

3.9.3 Bottom Image

User can set different by clicking “BottomImage” item of “Preference” menu.

3.9.4 Advance Settings

User can set the attribute of software interface and the attribute of bottom image by clicking “Advance Settings” item of “Preference” menu.


3.10 Language

Software supports three kinds of languages: “Chinese(Traditional)”, “Chinese(Simplified)”, “English”, user can change language via “Language” menu.

3.11 Start Wizard

Software supports “Start Wizard” setting, user can open wizard dialog by clicking submenu “Start Wizard” of “System”, Wizard includes searching local UPS, shutdown setting, SNMP UPS searching, Email setting, SMS setting and QR code display. These functions user also can be operated one by one from menu, please refer to section 3.2, 3.4.2, 3.4.3, 3.5, 3.6.2, 3.7.3.

Wizard dialog can be opened automatically at first time after installation. User should change software password at first for security, or else the next step of the wizard won't be shown. The password modification is shown only one time in wizard at the first installation.

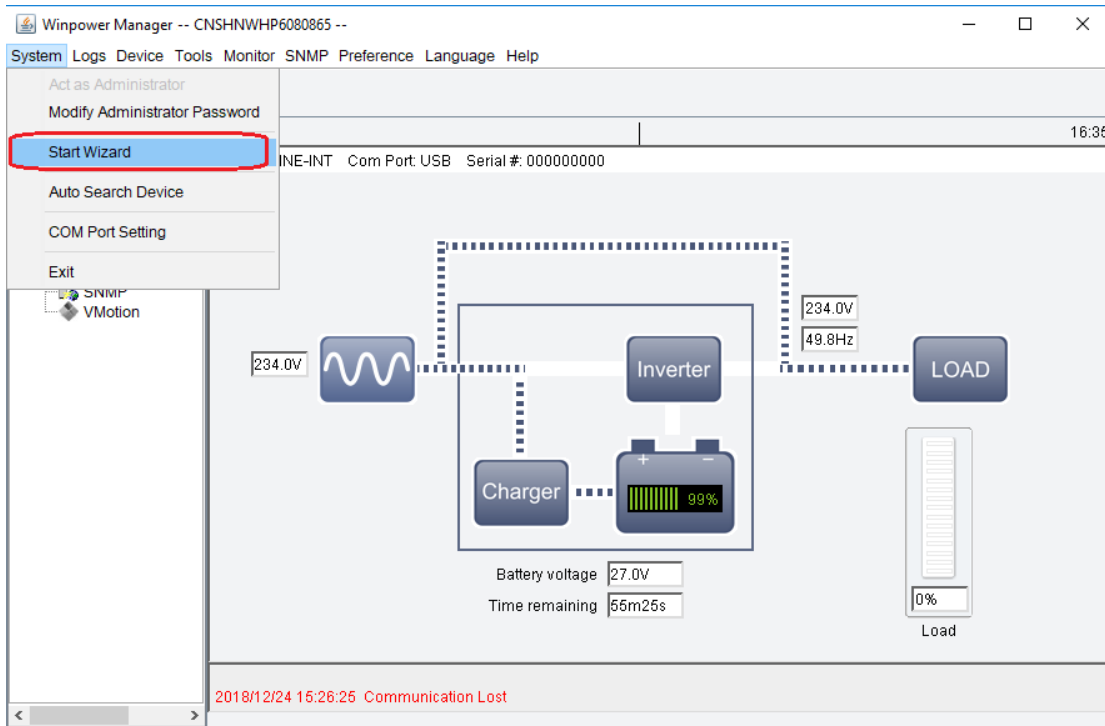

3.12 Help

3.12.1 Online help

Click “Contents” item of “Help” menu to open the description about software, user can refer to the detail information of software.


3.12.2 Version

Click “About” item of “Help” menu to refer to the software version and released date. When user has something wrong with the communication between software and UPS, user can tell customer service engineer about software version and released date.


3.13 Modbus TCP monitoring

Software supports up to 4 Modbus TCP devices, user can add or delete Modbus TCP device by clicking “Add/Delete Modbus TCP” of “System”.

Please make sure Modbus TCP is enabled on device setting first when user wants to use Modbus TCP monitoring function.

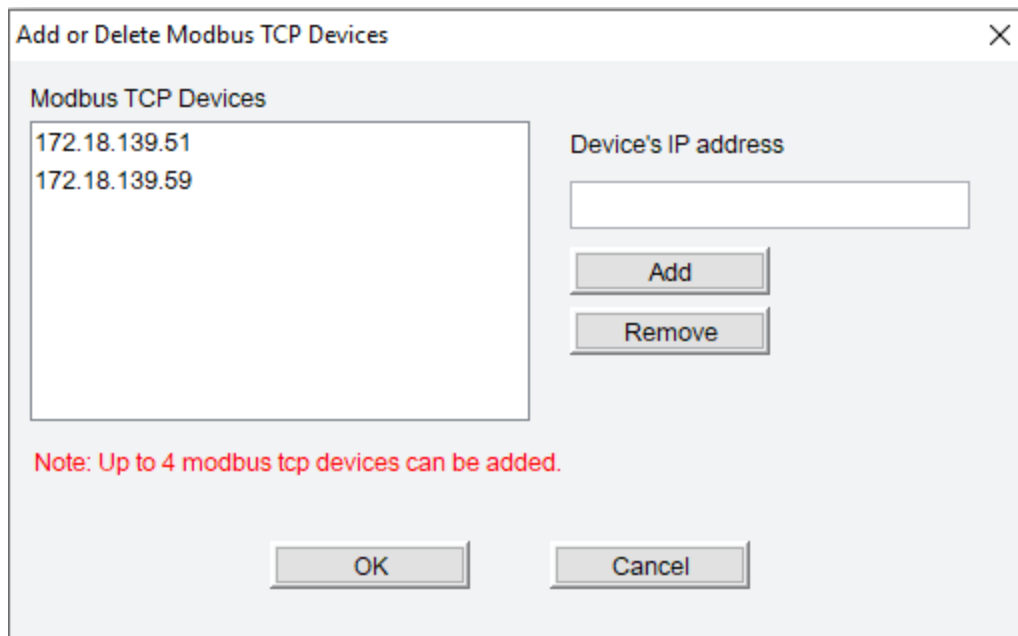

After adding the devices, there is an additional “Modbus” node under the tree. Expanding the “Modbus” node, all the Modbus TCP devices will be listed

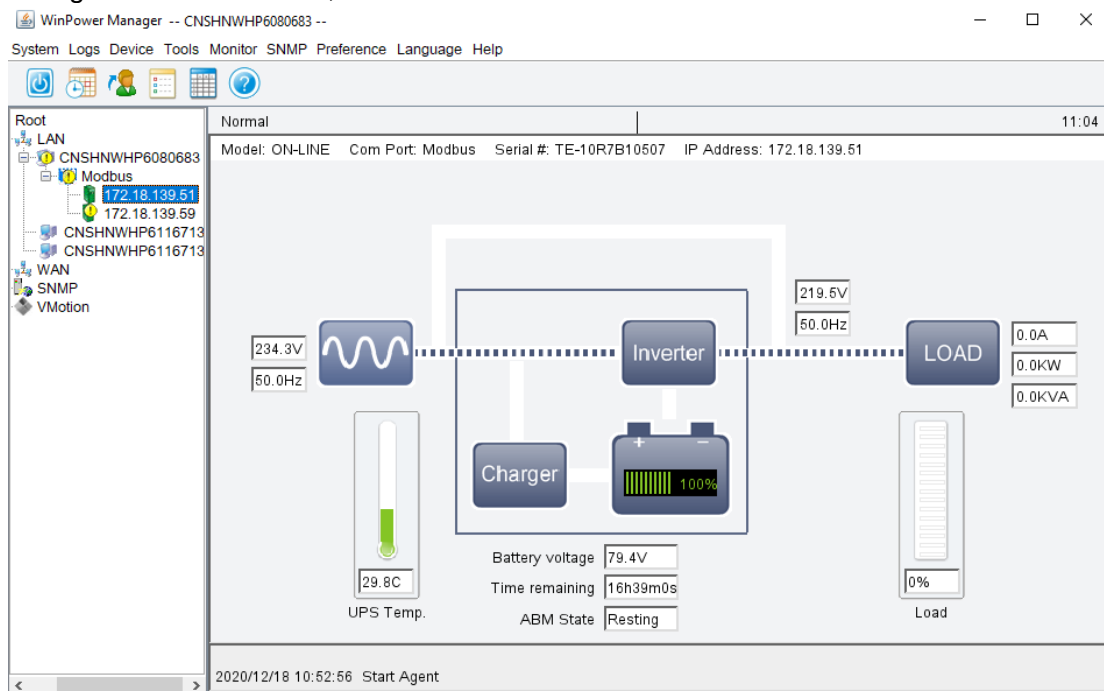

Device can be set or controlled through Modbus TCP, such as “UPS on-off, Battery self-test, and parameters configuration”



Off UPS

Once

Schedule Off UPS

Power Off Once

YEAR MONTH DAY

2020 12 18

11:44:34

Power On Once

YEAR MONTH DAY

2020 12 18

12:59:34

Select the UPS to be turned off

<input checked="" type="checkbox"/>	Modbus	ON-LINE_TE-10R7B10507
<input checked="" type="checkbox"/>	Modbus	ON-LINE_CP-10R2A16008

Select All

Purge All

OK Cancel

In addition, Operation System can also be protected to be shut down gracefully by Modbus TCP. Please check section “3.5.1” for the detailed shutdown setting.

Shutdown Settings

Local Setting Remote Setting

Shutdown Options

Modbus ON-LINE_CP-10R2A16008

☐ Allow battery to discharge for 10 min

☒ Begin Shutdown Immediately when Battery is Low

☐ Begin Shutdown when UPS Battery is at 40 % Capacity or lower

☐ Shut down when remaining battery time is below 2 min

☒ System ☒ Shut down ☐ Hibernate ☐ Multi-UPS input

☒ Shut down UPS

Time needed for system shutdown 2 min



Chapter 4 Frequent questions

4.1 How to do if software port is in use by other software

Sometimes the software manager interface stops at 9% fail to be started, that means the RMI port TCP 2099 is in use by other software, so software manager can't be started normally. If software manager fails to be started because of port in use by other software, software will try to use new port to start when port is in use by other software, and write the new port in portConfig.rmi file. At the same time software will inform user that old port is in use by other software, please exit software and restart. User should click "OK" button and wait the software icon disappear, then restart software, software will read new port from portConfig.rmi and start normally. Another way, user also can modify port by editing portConfig.rmi file located in c:\Program File\software install file.

▲ These ports software uses are TCP port 2099, UDP port 2198, 2199, 2200, 1824, 161 and 162. Http port 8888. TCP port 2099 can be modified manually. Other UDP port can't be modified. Port 2198, 2199, 2200 is used for remote management, if these ports are invalidation or in use by other software, the remote management function will be invalidation. Port 1824, 161 and 162 is for SNMP management function. Http port 8888 is for webserver function and APP function.

▲ Open the ports on the Linux/Unix, open the port UDP 2199 for example
`iptables -I INPUT -p udp --dport 2199 -j ACCEPT`
`iptables -I OUTPUT -p udp --dport 2199 -j ACCEPT`
`/etc/rc.d/init.d/iptables save`

User can enter the command "netstat -an|grep 2199" to check if the 2199 is used by the software.

Please refer to below image, the 2199/2099 is used by java which is our software process.



```
[root@pc35 MonitorSoftware]# netstat -an|grep 2199
udp        0      0  :::2199           :::*
           4452/java
[root@pc35 MonitorSoftware]# netstat -an|grep 2099
tcp        0      0  :::ffff:127.0.0.1:2099  :::*
           4452/java
EN
[root@pc35 MonitorSoftware]#
```

▲ Open the ports on the Windows, open the UDP port 2199 for example
`netsh.exe firewall add portopening udp 2199 WinpowerPort`

User can enter the command "netstat -aon|findstr 2199" to get the process ID and "tasklist|findstr PID" to get the process name.

Please refer to below image, the 2199/2099 is used by javaw.exe which is our software process.

```
C:\Users\E2011049>netstat -aon|findstr "2099"
TCP    127.0.0.1:2099          0.0.0.0:0              LISTENING        29380
TCP    127.0.0.1:2099          127.0.0.1:61737         ESTABLISHED      29380
TCP    127.0.0.1:61737         127.0.0.1:2099         ESTABLISHED      31028


C:\Users\E2011049>tasklist|findstr "29380"
javaw.exe                29380 Services           0      38,304 K

C:\Users\E2011049>netstat -aon|findstr "2199"
UDP    0.0.0.0:2199           *:.*                    29380
UDP    [::]:2199              *:.*                    29380

C:\Users\E2011049>tasklist|findstr "29380"
javaw.exe                29380 Services           0      40,024 K
```

4.2 Configure the computer powered by Multi-UPS shut down safely

For local computer: If there are more than one UPS supplying power to the local computer with software as below 4.2.1, you want to safely shut down or suspend the local computer before all UPS can't supply power to the local computer. You should select the "Multi-UPS input" option in the "shutdown settings" dialog of each UPS and set condition, refer to the following figure 4.2.2. The local computer won't be shut down or in suspend mode until all the condition of all UPS is met.

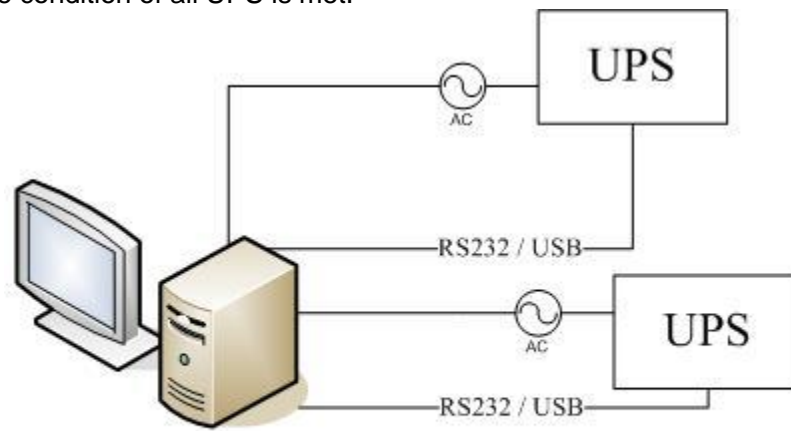

Server powered from two redundant power supply

Figure 4.2.1

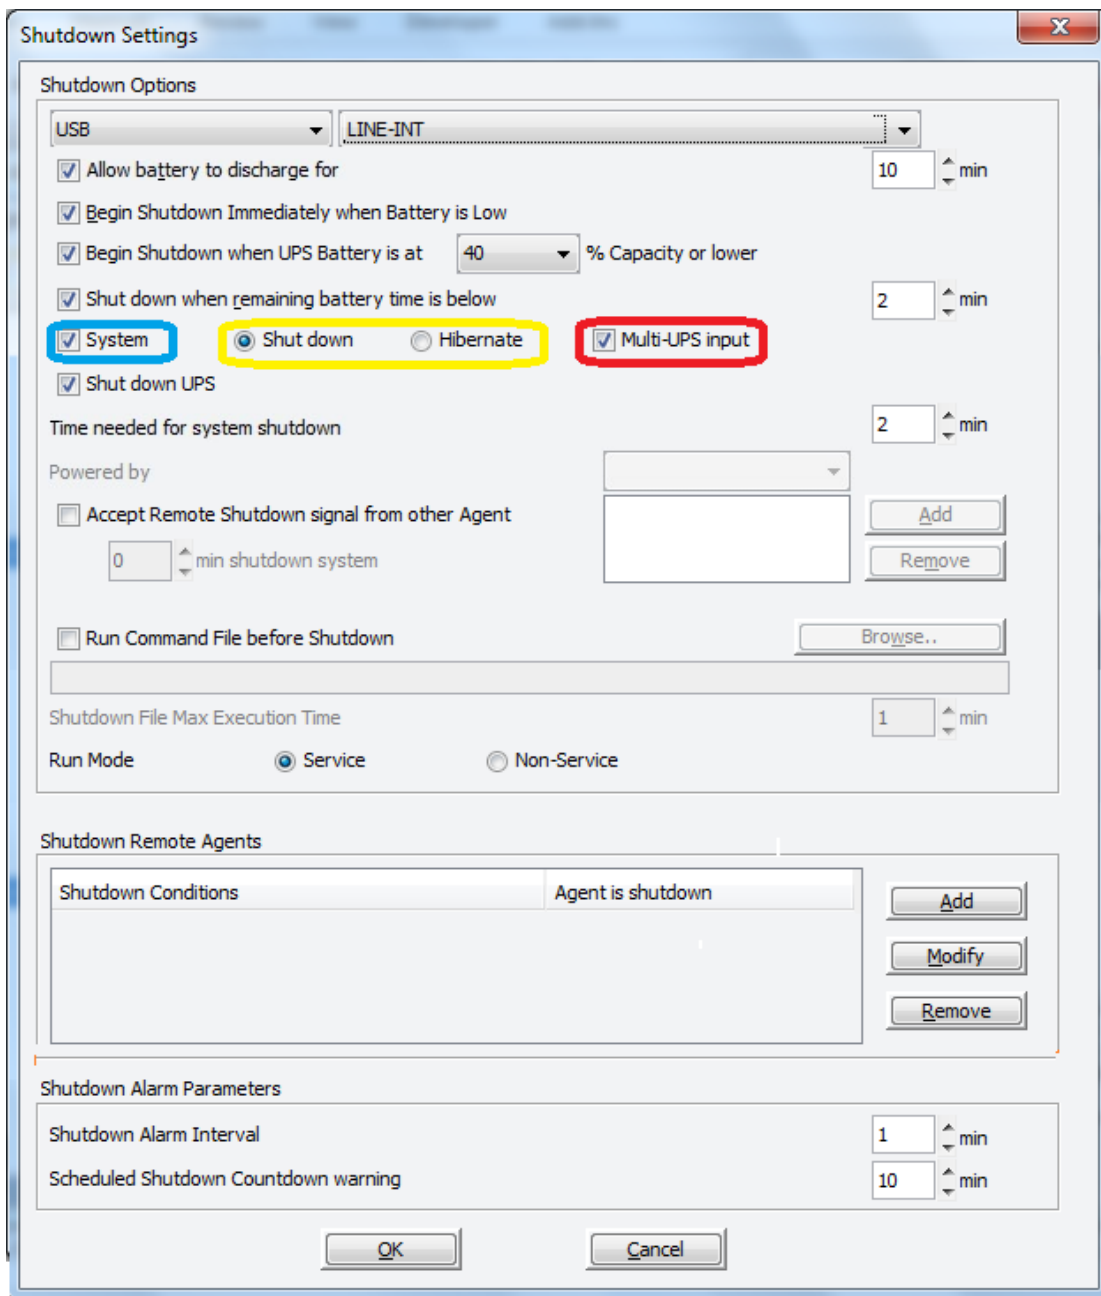


Figure 4.2.2

For remote computer without communication with UPS: If there are more than one UPS supplying power to the remote computer with software, you want to safely shut down or suspend the remote computer before all UPS can't supply power to the remote computer. You should configure the software installed on the remote computer to be shut down by another computer, refer to the following figure 4.2.3, and in the "shutdown settings" dialog of another computer with software communicating with the two UPS to shut down the remote computer, the shutdown condition of each UPS should be set separately, refer to the following figure 4.2.4 and 4.2.5. The remote computer won't be shut down or in suspend mode until all the condition of all UPS is met.



Shutdown Settings

Shutdown Options

☐ Allow battery to discharge for 999 min

☐ Begin Shutdown Immediately when Battery is Low

☐ Begin Shutdown when UPS Battery is at 90 % Capacity or lower

☐ Shut down when remaining battery time is below 10 min

☐ System ☒ Shut down ☐ Hibernate ☐ Multi-UPS input

☐ Shut down UPS

Time needed for system shutdown 999 min

Powered by Load Segment1

☒ Accept Remote Shutdown signal from other Agent 172.18.127.10 Add Remove

0 min shutdown system

☐ Run Command File before Shutdown Browse..

Shutdown File Max Execution Time 1 min

Run Mode ☒ Service ☐ Non-Service

Shutdown Remote Agents

Shutdown Conditions	Agent is shutdown

Add Modify Remove

Shutdown Alarm Parameters

Shutdown Alarm Interval 1 min

Scheduled Shutdown Countdown warning 10 min

OK Cancel

Figure 4.2.3

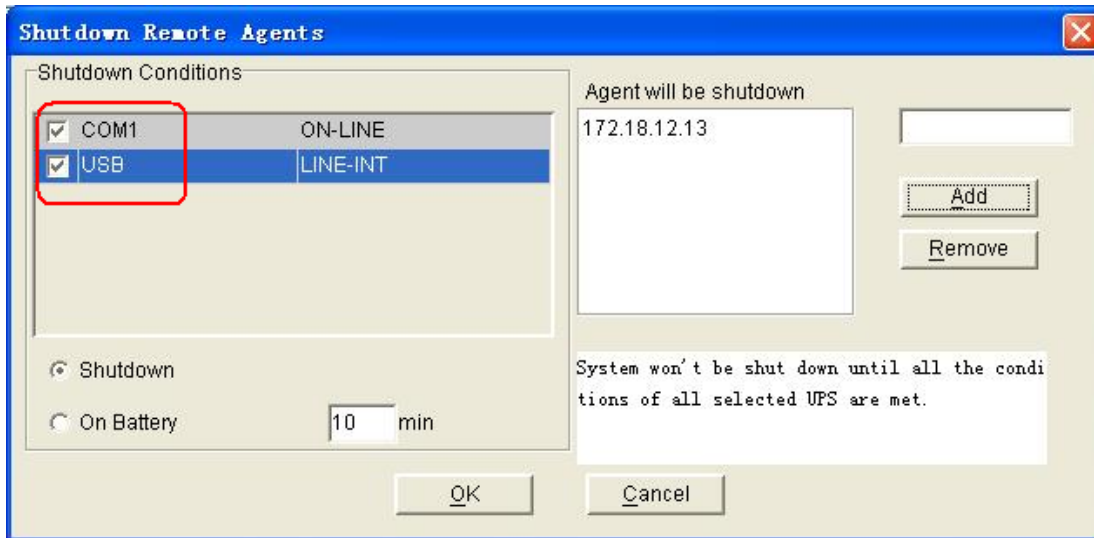


Figure 4.2.4

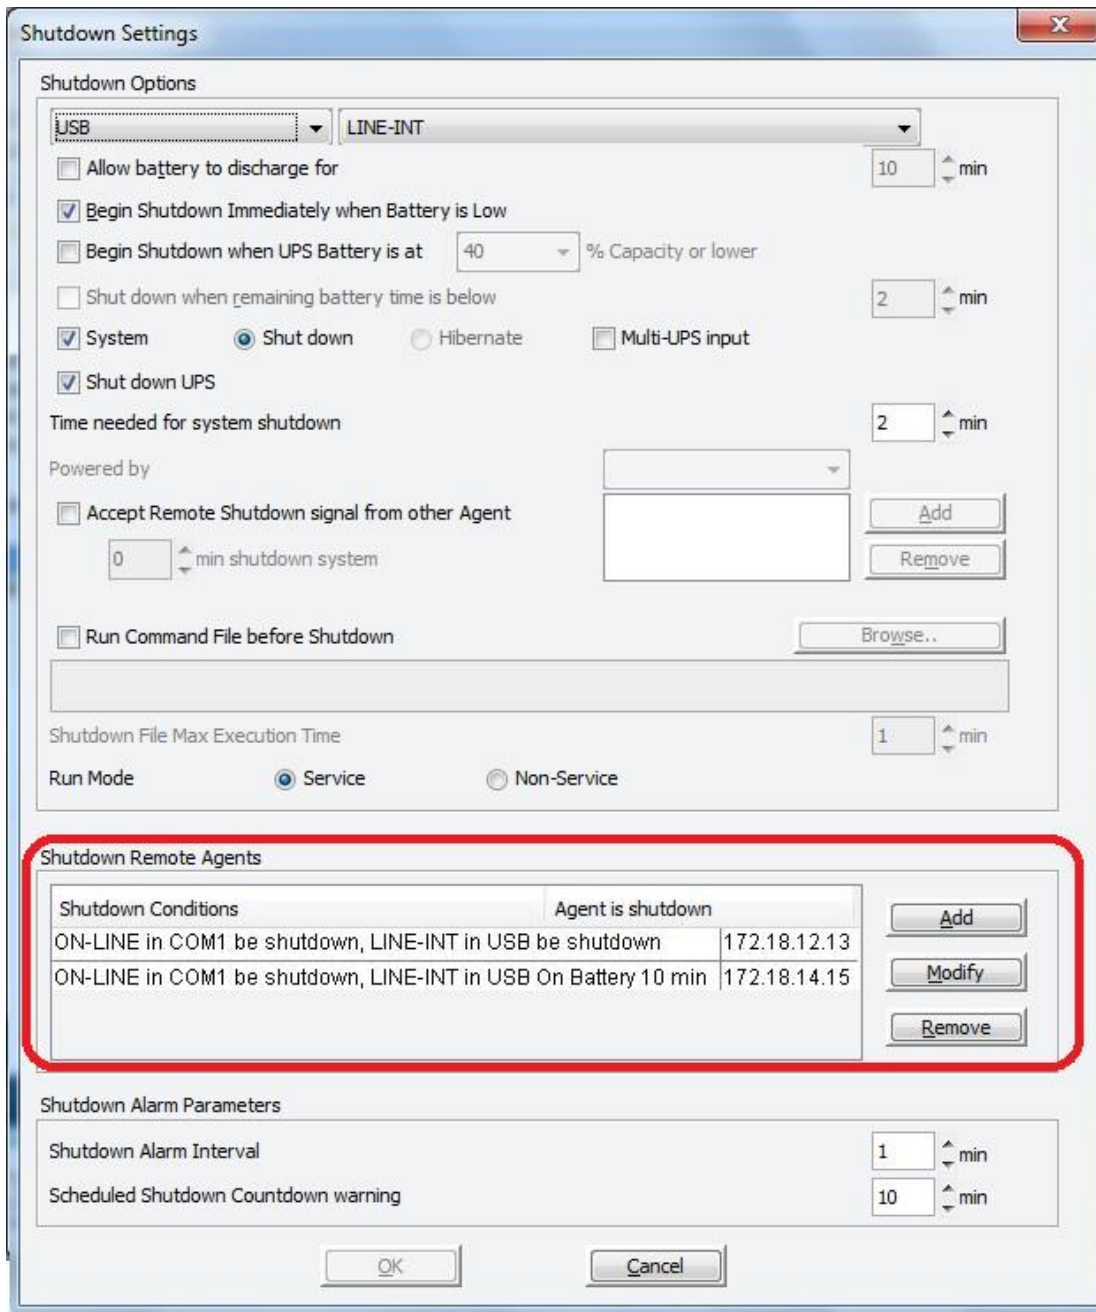


Figure 4.2.5

4.3 The communication between UPS and software on Debian Etch Stable Core 2.6 18-5-486

Question:

UPS can't communicate with software on Debian Etch Stable Core 2.6 18-5-486

Method to fix it:

Here are the procedures to solve this question:

First: Login in Debian as root, the permission of general user is limited to install software. Debian refuse to login as root, some special settings is needed.

Please note:



- a. In the login interface, there are three icons: “Language“, “Session“, “Action“, choose “Action”
- b. Choose the last icon of “configure the login manager” in the dialog pop-up
- c. Choose the icon of “security” in the dialog pop-up
- d. Choose “allow local system administrator login”

Second: Input the user name of root and the password, and then install monitoring software manually. Use the command “./agent start” to start software service, and then use the command “./monitor” to start the monitor interface.

Finally: Copy the document of s99UPS from Linux (attached CD) to /etc/rcS.d,

The file s99UPS is used to start software service automatically. When the computer reboots, software service will be started automatically, user only need to start the monitor interface by the command “./monitor”.

Please note:

- a. If the third step is executed, no matter what the user login in as root or a general user, the communication with UPS will be successful.
- b. If the third step have not been executed, you should login as root, and use the command “./agent start” to start software service. If login in as a general user, the communication with UPS will be failed

4.4 The communication between UPS and software on RedHat Core 2.6 9

Question:

UPS can't communicate with software on RedHat Core 2.6 9


Method to fix it:

Add the word of “none /proc/bus/usb usbdevfs defaults 0 0” to the document “/etc/fstab”, software will find the UPS when choose the item of “Auto Search Device”.

4.5 Mac 10.5 with terminal interface opened can be shut down normally

Question:


Mac 10.5 OS with the terminal interface opened can't be shut down normally by software. The information is shown as the following figure.

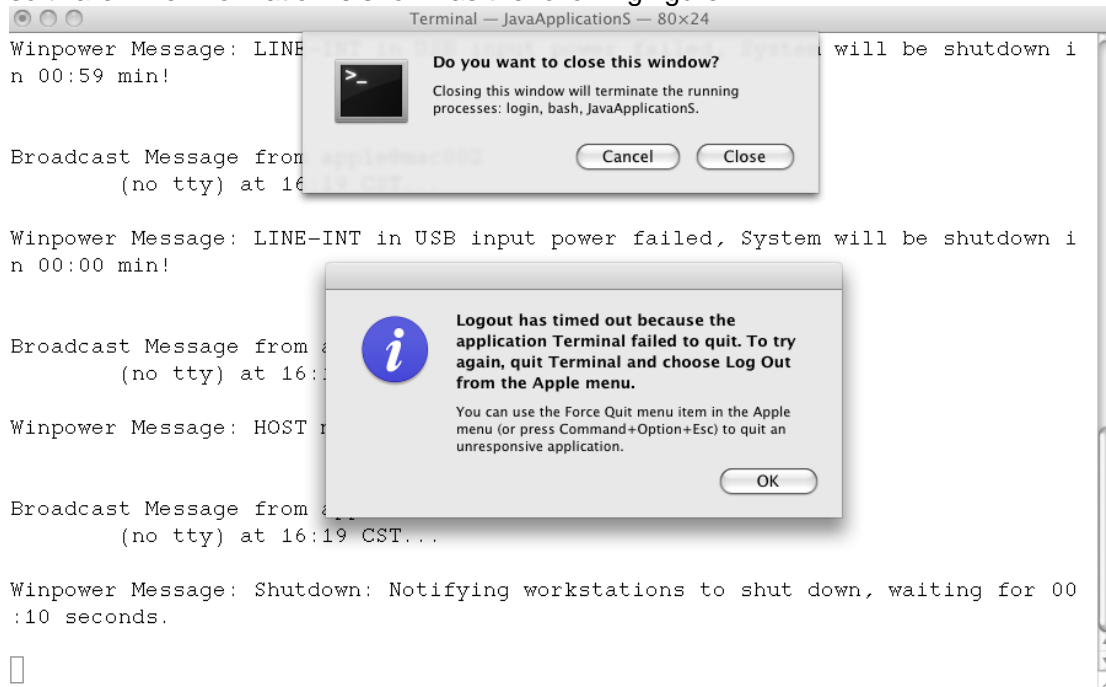

Method to fix it:



Change the setting of the terminal: Click “Terminal” shown on the left corner of Mac 10.5 OS, and select “Preferences...”, there will be a dialog shown as below. Please select “Never” of “Prompt before closing” in the “Shell” interface.

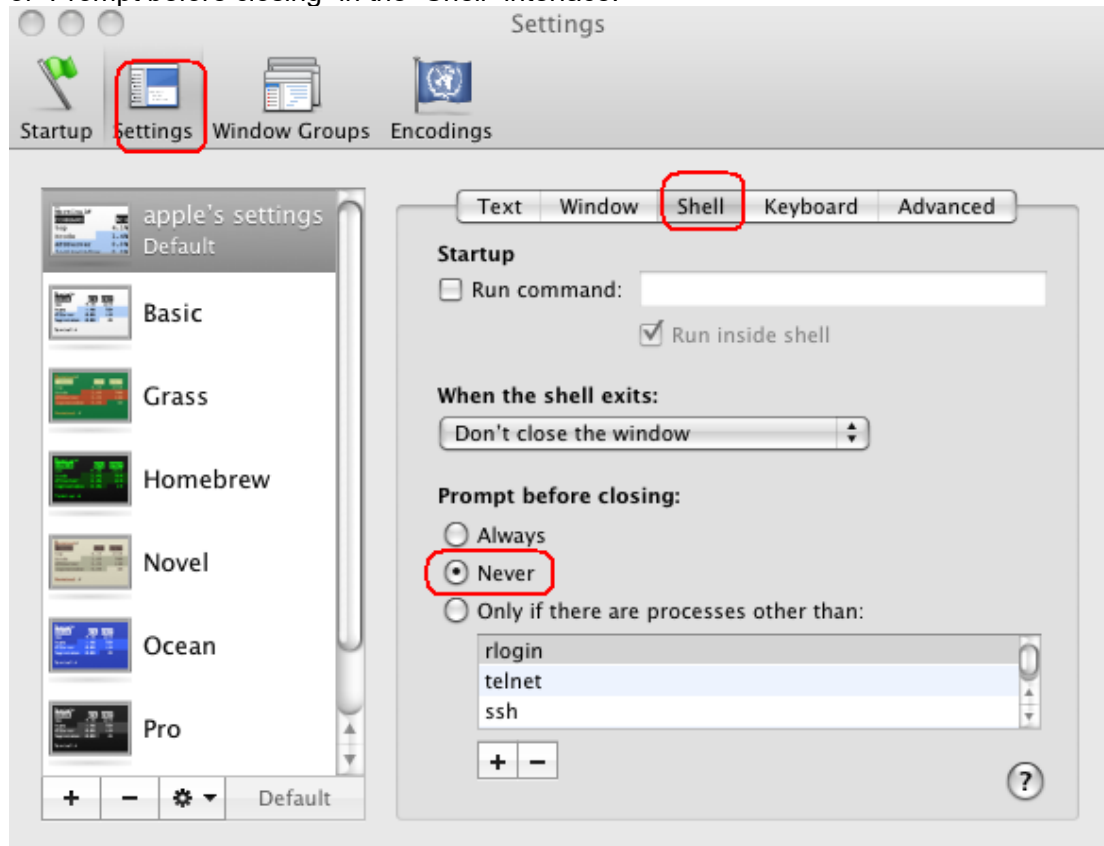

4.6 How to use software on Windows server 2008 core

Windows Server 2008 Core OS prepared

Before installing software, please ensure the configuration of Windows Server 2008 Core is correct, including network settings, port settings.

Note: if you want to set the software by another agent, please shut down the firewall first. If you want to use the remote desktop function of Windows Server 2008 Core, you should enable the remote desktop function.

The following command may be useful for you to reference.

➤ **Command for shutting down the firewall**

Command: netsh firewall set opmode disable

➤ **Enable the remote desktop function**

1. Enter command “regedit”, open the REGEDIT UI.
2. Edit
HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Control\Terminal
Server\DenyTSConnections = 0
3. Open the Port for remote desktop function
Enter command: Netsh firewall set portopening tcp 3389

Software installation

- Copy the installation file “setup.exe” to Windows Server 2008 Core.
- Enter the path where the installation file exists.
- Start to install.

You can install UPS monitoring software in Silent installation method or Interface installation method.



Silent installation method: Enter command: “setup -i silent” or “setup.exe -i silent”, then the installation can be started, waiting for a moment to finish the installation.

Interface installation method: Enter command: “setup” or “setup.exe”, then the installation can be started, please follow “next” button of interface to finish the installation.


➤ Check if the installation is successful:

1. Enter the installation path, the default path is c:\Program file (X86)\MonitorSoftware, Find file “UPSEVENT.CSV”, Enter command: “type UPSEVENT.CSV”, the log of agent action will be shown. See the below screenshot, that means the agent is running.

```
C:\Program Files (x86)\MonitorSoftware>type UPSEVENT.CSV
15 01/20/2010 04:28:01 [ in Agent Start][,-1,]

C:\Program Files (x86)\MonitorSoftware>
```

2. Enter the installation path, start the interface of UPS monitoring software with the command “manager”. Software interface will be shown as following picture.

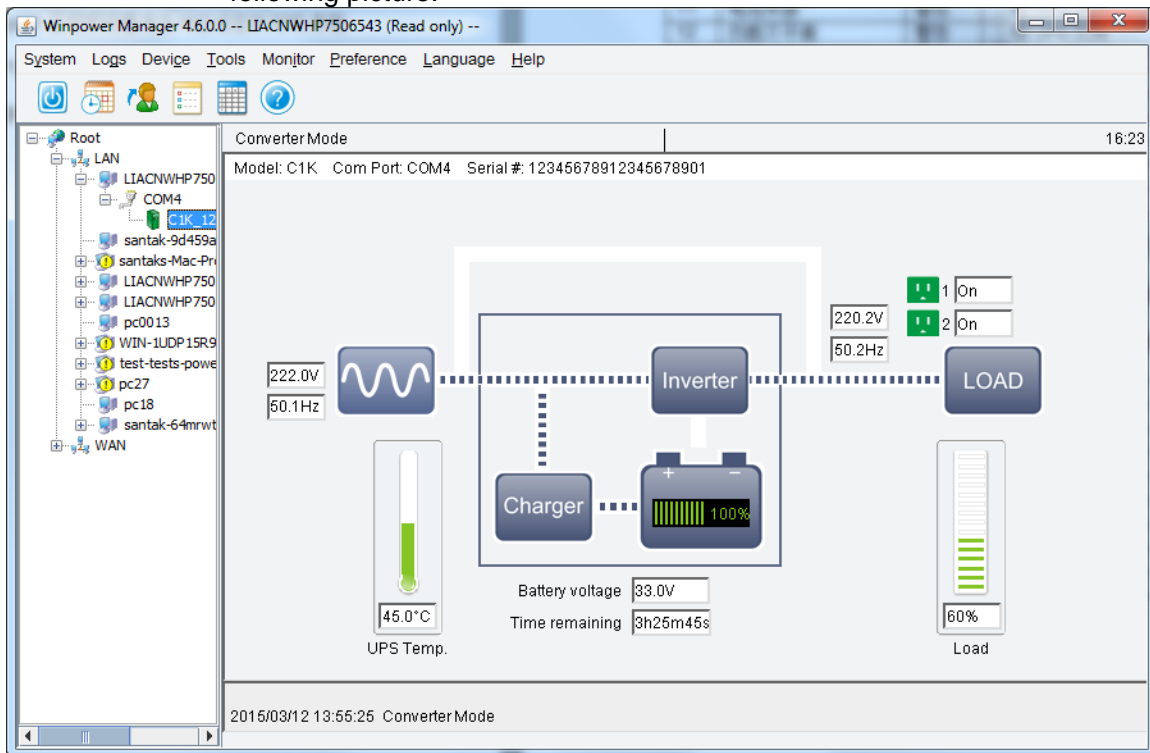

3. Check the status of the processes of UPS monitoring software. Enter command “tasklist” to open the task manager. See below screenshot, if these processes are all running, that means the UPS monitoring software is running normally.



```
C:\Program Files (x86)\MonitorSoftware>tasklist
```

Image Name	PID	Session Name	Session#	Mem Usage
System Idle Process	0	Services	0	24 K
System	4	Services	0	300 K
smss.exe	220	Services	0	1,012 K
csrss.exe	300	Services	0	3,608 K
csrss.exe	352	RDP-Tcp#0	1	4,612 K
wininit.exe	360	Services	0	4,176 K
winlogon.exe	388	RDP-Tcp#0	1	5,004 K
services.exe	448	Services	0	7,172 K
lsass.exe	456	Services	0	9,760 K
lsass.exe	464	Services	0	5,712 K
svchost.exe	556	Services	0	8,288 K
svchost.exe	628	Services	0	6,424 K
svchost.exe	720	Services	0	10,956 K
svchost.exe	760	Services	0	27,284 K
svchost.exe	808	Services	0	8,872 K
svchost.exe	872	Services	0	15,452 K
svchost.exe	988	Services	0	10,836 K
svchost.exe	540	Services	0	2,576 K
svchost.exe	1148	Services	0	9,332 K
svchost.exe	1212	Services	0	5,420 K
svchost.exe	1336	Services	0	4,612 K
taskhost.exe	1820	RDP-Tcp#0	1	3,816 K
cmd.exe	1864	RDP-Tcp#0	1	3,028 K
conhost.exe	1872	RDP-Tcp#0	1	3,160 K
msdtc.exe	1460	Services	0	7,124 K
csrss.exe	436	Console	3	3,504 K
winlogon.exe	1628	Console	3	3,844 K
LogonUI.exe	584	Console	3	13,076 K
rdpclip.exe	1716	RDP-Tcp#0	1	5,720 K
monitor.exe	1540	Services	0	3,480 K
javaw.exe	2028	Services	0	20,992 K
javaw.exe	1988	Services	0	21,696 K
manager.exe	1548	RDP-Tcp#0	1	3,096 K
javaw.exe	1384	RDP-Tcp#0	1	33,668 K
tasklist.exe	1980	RDP-Tcp#0	1	5,004 K
WmiPrvSE.exe	1188	Services	0	5,732 K

```
C:\Program Files (x86)\MonitorSoftware>
```

Uninstall software

1. Close the interface of the UPS monitoring software and enter the installation path, the default path is c:\Program file (X86)\ MonitorSoftware, enter command: "wpExit" to stop software, waiting for a moment.
2. Enter the installation path, the default path is c:\Program file (X86)\ MonitorSoftware, find the file "UninstallerData".

You can uninstall software in Silent installation method or with Interface uninstall method.

Silent uninstall method: Enter the file "UninstallerData" and then enter command: "Uninstall -i silent" or "Uninstall.exe -i silent" to uninstall the software, then uninstall can be starting, waiting for a moment to finish uninstall.

With interface uninstall method: Enter the file "UninstallerData" and then enter command: "Uninstall" or "Uninstall.exe" to uninstall the software with interface, please follow "next" button of interface to finish uninstall.

4.7 How to use software on VMware ESX 3.5/4.0/4.1

This section describes the installation and configuration of the Software on a VMware ESX Server. Software allows you to connect VMware ESX 3.5/4.0/4.1 with a UPS through the RS232 or USB port.

Please note: When you want to connect VMware ESX 4.0/4.1 with a UPS through USB port, you should execute the command to activate the usb.o on your System to make the USB communication normal, and then restart the VMware ESX 4.0/4.1 server. The command: `esxcfg-module -s "libusb_support=1" usb.o`

If you don't want to input the command above, you can start the agent of software after first installation. And then restart the VMware ESX 4.0/4.1 server, the USB communication will be normal.



The software will be monitored and configured by a remote Agent on either a Microsoft Windows or Linux platform.

The software notifies the VMware server of power events or UPS alerts with pop up broadcast information on the console. It also safely shuts down the VMware ESX server and the guest operating system.

Before the VMware ESX system shuts down, use the shutdown.sh script to shut down the guest operating system.

All operations are tested on VMware server with two guest operating systems (Windows 2003 and Windows XP), when the certain conditions exist, such as:

- ◆ UPS Battery is low
- ◆ Battery backup time is reached

Tested operations include:

- ◆ Safely shuts down the VMware server
- ◆ Safely shuts down the guest operating system
- ◆ Software notifies the VMware server of power events or the UPS alerts

Installation

This section provides information about installing and configuring Software on a VMware server and installing VMware Tools on a guest operating system.

Prerequisites

- ◆ VMware ESX Server with 125 MB free space for the software.
- ◆ VMware Infrastructure client must be installed on different machine.

Software Installation

To install the software:

1. Download the software from the Web site or from the CD provided with the UPS.
2. Enter the command to install software:

▲ For the CD installation, enter the command:

```
mount /dev/cdrom /mnt
cd /mnt/Linux
./setup_console.bin
```

▲ For the download installation, enter the command:

```
tar -zxvf Winpower_setup_Linux.tar.gz
cd /mnt/Linux
./setup_console.bin
```

- 3 Start the Agent. From the installation path, enter the command:

```
./agent start
```

Installing VMware Tools on a Microsoft Windows Guest

To install the VMware Tools for a Microsoft Windows guest:

1. On the VM Templates page, move the pointer over the virtual machine template name and select View Console from the menu.

2. Insert and start the Microsoft Windows operating system installation CD.

3. Log in to the guest operating system inside the virtual machine console, and then click Install VMware Tools.

4. From within the guest operating system, click OK to confirm that you want to install VMware Tools and launch the Install Shield wizard.

▲ If auto-run is enabled in the guest operating system (the default setting for Microsoft Windows operating systems), a window opens.

▲ If auto-run is not enabled, run the VMware Tools installer. Click Start > Run and enter D:\setup.exe, where D: is the first virtual CD-ROM drive.

5. Follow the on-screen instructions.

▲ On Microsoft Windows Server 2003, the SVGA driver is installed automatically, and the guest operating system uses it after it reboots.



▲ After you install VMware Tools, Microsoft Windows 2000 and Microsoft Windows XP guest operating systems must be rebooted to use the new driver.

Installing VMware Tools on a Linux Guest

The VMware Tools installation package is on the VMware server installation CD on the path **VMware\RPMS**.

To install the VMware Tools for a Linux guest:

1. On the VM Templates page, move the pointer over the virtual machine template name and select View Console from the menu.
2. Insert and start the VMware server installation CD.
3. Log in to the guest operating system inside the virtual machine console, and then click Install VMware Tools.

4. Mount the CD with the command:

```
mount /dev/cdrom /mnt
```

5. Install the package with the command:

```
cd /mnt/VMware/VPMS
```

```
rpm -Uvh VMware-esx-tools-***.i386.rpm
```

NOTE: The package name is likely to be different.

6. Configure the VMware Tools with the command:


```
Vmware-config-tools.pl
```

7. Enter number: 1

8. Start the VMware Tools with the command:

```
Vmware-toolbox &
```

VMware Tools on the summary row displays OK, if the tools are available (refer to the following figure):

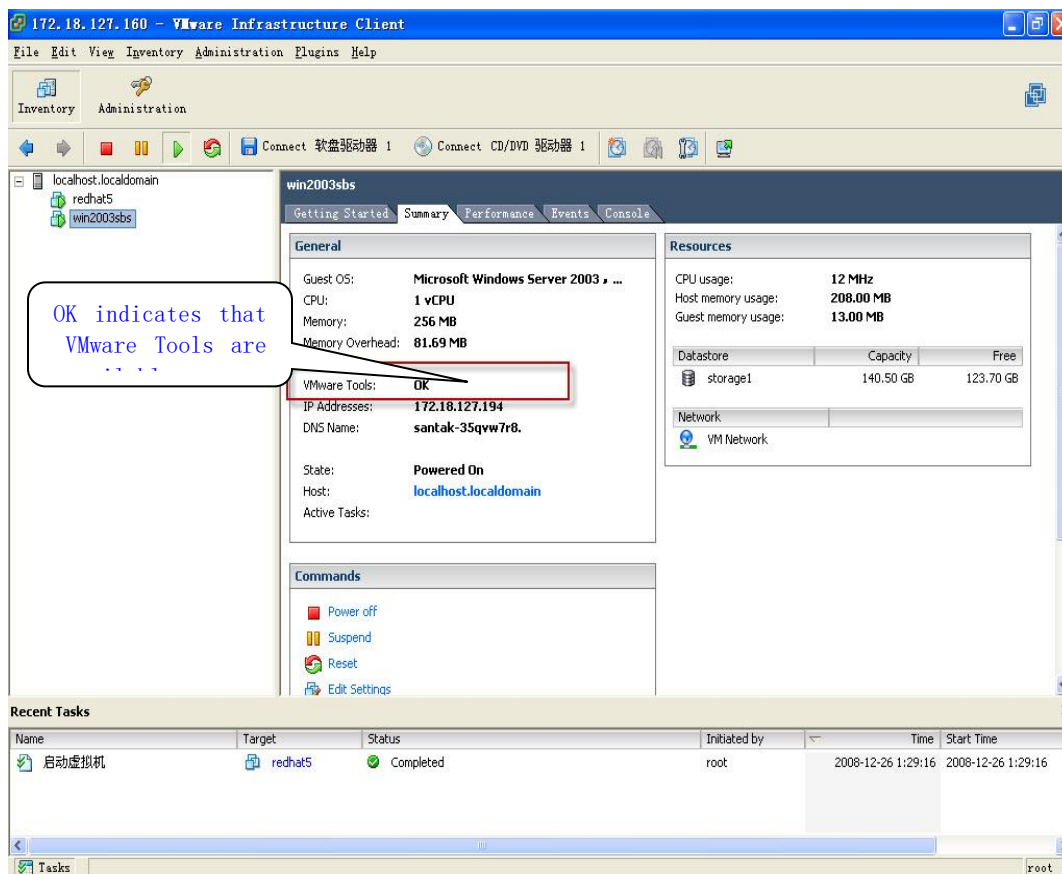

Configuration



This section explains configuration for the Software and for the VMware server.

Software Configuration

The VMware server works in console mode and can't be used for configuration. Use a remote agent with the same software version to configure the VMware server.

1. Start the manager interface on the remote software Agent in the Microsoft Windows operating system.

2. If the two Agents are in the same LAN, the VMware server client will be added to the topology automatically. Otherwise, add the Agent manually (select Monitor Remote Device from the Monitor menu). The software will auto search the UPS when the Agent starts for the first time after installation.

If the search fails:

- ▲ Select the VMware Server Agent from the tree view.

- ▲ Acting as the Administrator, select "Auto Search Device" from "System" menu. The UPS connected with VMware server appears in the LAN tree view.

3. Select Shutdown Settings from the Device menu. Set the battery backup time, and select the Begin Shutdown Immediately if Battery Low check box and the Run Command File before Shutdown check box (refer to the following figure).



VMware Server Configuration

All hardware elements must have an operational network configuration that allows them to communicate freely with each other. Software uses TCP and UDP for communication with UPS.

1. Confirm that the following UDP ports are opened on the ESX server Firewall: 2198, 2199, 2200

2. Confirm that the we following TCP ports are opened on the ESX server Firewall: 2099

For Example:

```
esxcfg-firewall -o 2198,udp,in,UPSMS
```

```
esxcfg-firewall -o 2099,tcp,in,UPSMS
```

3. If you want to disable the firewall permanently, enter the command: chkconfig iptables off



4. To disable the firewall temporarily, enter the command: `service iptables stop`

4.8 How to use software on VMware ESXi OS

Please refer to the document: [UserManual_for_VMwareESXi.pdf](#)



Chapter 5 Software Secure Usage statement

1. Login password is encrypt using AES during transmission over the network to ensure remote network security access.
2. Use HTTPS instead of HTTP access web and APP function, Use Web Socket over SSL for pushing message to APP to ensure network security access
3. Re-authenticate the user before modifying the password to ensure security access
4. Set the login timeout for 1 hour, if the application is not active, when user wants to operate software via manager/web/app, there will be message prompted that software should need to re-login after 1 hour login timeout .
5. Encrypt JAVA RMI with SSL to ensure software running safely
6. User can get the inventory from the device including Location, IP address, Model, device status, Link, serial number.(refer to section 3.2 to get more information)
7. Software can only support three physical access ports with UPS: USB(maximize number 32) , RS232/USBtoRS232(maximize number 4) and SNMP card.
Do not connect unauthorized USB device or SD card for any operation.
8. Software support Administrator account (the default password is null) and ordinary account.
Administrator account can set all the parameters, set the UPS on/off schedule, control the UPS, export/delete the log and so on. ordinary account has the read-only privilege.
The SNMP Public community is "public" as default
9. Software use TCP port 2099 for local agent. it use UDP port 2198, 2199, 2200 for host-to-host remote communication.it use UDP 1824, 161 and 162 for SNMP function. It use 8888 for web-server. (refer to section 4.1 to get more information for how to open/check the port on the Windows/Linux/Unix)
Software service is UPSmonitor in the Services list
10. Software will log the device data and events: All the data is saved in "UPSDATA.CSV" under the software installation path, All the events are saved in "UPSEVENT.CSV" and "SNMPEVENT.CSV" under the software installation path. (refer to section 3.3.7 for more information about how to set/check/export the data and events)
11. Software can't support update the software on-line. All the parameters are saved in "UPSPILOT.CFG" under the installation path. User can copy this document to take back up of the configurations or User can choose "Yes" when the installation guide ask "Would you like to keep the old configuration settings?".
12. Refer to section 2.4 for more information about uninstalling the software



Appendix A - The detail information about glossary

1. **Agent** --- A service program running on the background.
2. **UPS battery low** --- When AC fails, UPS works on battery, when the battery level is under than some value, UPS will give battery low warning.
3. **UPS battery backup time** --- When AC fails, how much time UPS can work on battery. Battery backup time exhausted means that the time UPS works on battery is longer than the time set in the "UPS shutdown parameter".
4. **UPS overload** --- the load is above 110 %.
5. **UPS works on bypass** --- UPS can't work on inverter because of hardware fault or other reasons, at that time, UPS will work on bypass, when AC fails, there will no output immediately.
6. **UPS battery self-test** --- UPS mode changes from normal mode to battery mode for some time, and then return to normal mode. The purpose of battery self-test is to check the battery OK or not.
7. **UPS battery self-test fail** --- UPS can't work on battery mode normally, user should check battery connect or not, or battery will need to be changed.
8. **Shutdown File Max Execution Time** --- The time for agent starts to execute file before beginning to save applications and shutting down OS.
9. **The time for shutdown OS** --- The UPS output will be shut down when the time exhausted
10. **Accept other agent shutdown signal** --- When the UPS communicating with remote agent is abnormal, the remote agent will send shutdown signal to the agent.
11. **The warning start time for shutdown schedule** --- The start time software will give warning information to user, if user has set shutdown schedule
12. **The warning interval for shutdown** --- The interval of warning after software starts to give shutdown warning



Appendix B - Event List

NO.	Event	Type	descriptions
1	UPS battery low	Severity	One condition configured to shut down system and UPS or not
2	UPS battery back-up time exhausted	Severity	User can configure battery back-up time in "Shutdown Parameter" dialog
3	UPS fail	Severity	-
4	UPS overload	Severity	The load is over 110%
5	Communication with UPS lost	Warning	Communication line is unconnected or communication port is fail
6	AC fail	Warning	-
7	Bypass output	Warning	UPS will work on bypass because of overload or hardware fail. When UPS work on bypass, it can't protect key device if AC fails.
8	Bypass no output	Warning	-
9	Self-test fail	Warning	-
10	Input phase error	Warning	Only three phase UPS support
11	Battery is no connection	Warning	Only three phase UPS support
12	Overload unbalanced	Warning	Only three phase UPS support
13	Overload too high	Warning	The output load is between 100% and 110%
14	Internal warning	Warning	Only three phase UPS support
15	Maintenance board open	Warning	-
16	AC restore	Information	-
17	Communication with UPS restore	Information	-
18	Agent start	Information	-
19	Agent stop	Information	-
20	System is shut down	Information	-
21	System is shut down by other agent	Information	Configure the remote Agent shut down by local Agent in "Shutdown Parameter" dialog
22	The time for specific day shutting down UPS is out	Information	Shutdown warning will be shown on dialog every shutdown interval time
23	The time for weekly shutting down UPS is out	Information	Shutdown warning will be shown on dialog every shutdown interval time
24	Self-test begin	Information	Battery self-test begin immediately
25	Self-test cancel	Information	-
26	Self-test end	Information	-
27	Specific day Self-test begin	Information	-
28	Specific day Self-test cancel	Information	-
29	Specific day Self-test end	Information	-
30	Monthly Self-test	Information	-



	begin		
31	Monthly Self-test cancel	Information	-
32	Monthly Self-test end	Information	-