



## **Quick Installation Guide**

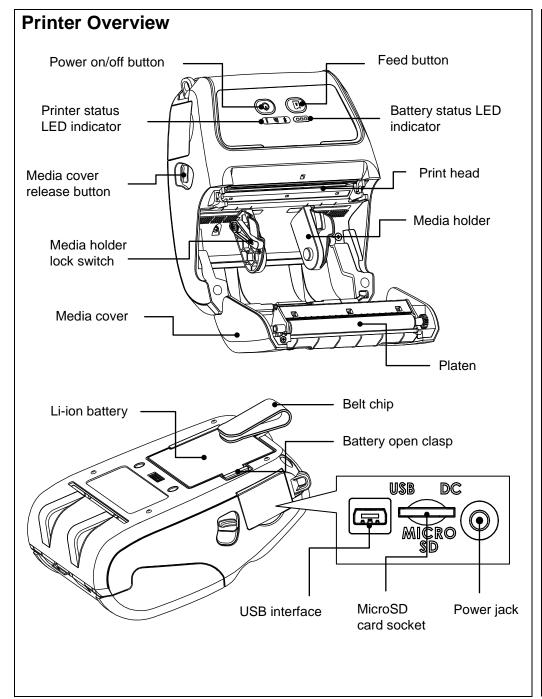

Keys an	d LEDs	Indication		
Keys	Function			
Ø	- Pres	- Press and hold for 2-3 seconds to turn on the printer.		
	<ul> <li>Press and hold for 2-3 seconds to turn off the printer.</li> </ul>			
₽	Ready status: Feed one label			
	Printing status: Pause the print job			
LEDs	Status		Indication	
(COO)		Green (solid)	Full charged	
			2/3 charged level	
		Green (solid)	1/3 charged level	
		Green (blinking)	Low battery	
		Amber (solid)	Battery is charging	
	Blue (solid)		Bluetooth device is ready	
	Blue (blinking)		Bluetooth device is communicating	
	Blue (so	olid)	WiFi device is ready	
<b>S</b>	Blue (blinking)		WiFi device is communicating	
655	Note: WiFi device is optiona			
ů	Off		Printer is ready	
	Green (blinking)		- Printer is paused	
			Printer is downloading data	
	Red (solid)		Media cover is open	
			- Out of memory	
	Red (blinking)		- No paper	
			- Paper jam	
netall R	Alt Clin	and Battery		

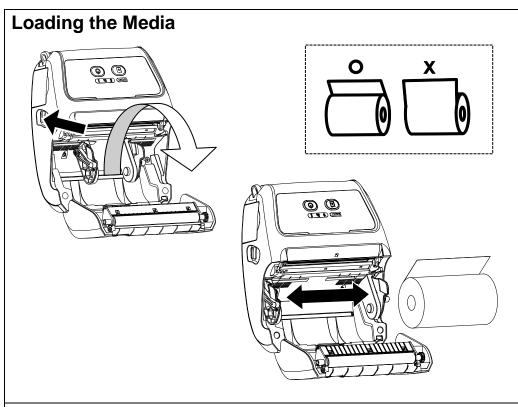

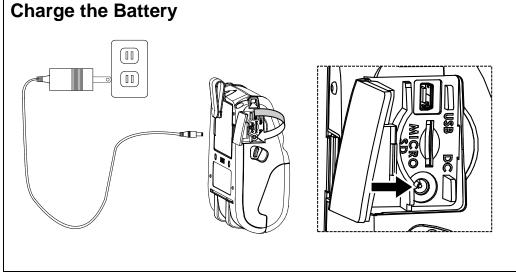

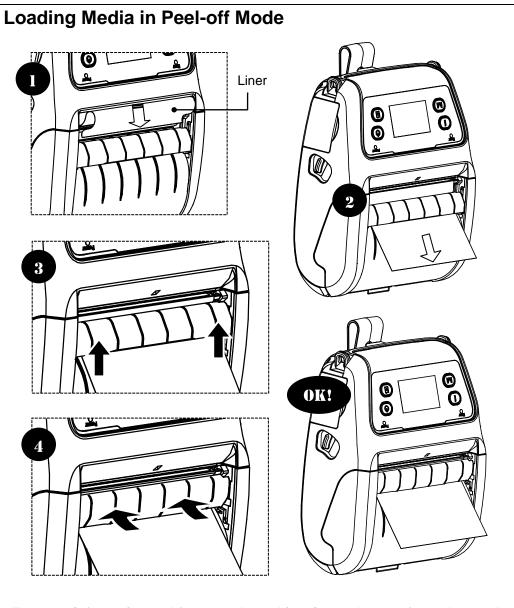

- \* For more information and features about this printer, please refer to the user's manual on the CD disk.
- \* Specifications, accessories, parts and programs are subject to change without notice.

Page 2 of 2 P/N: 39-0520001-00LF